


Network Scanner

User's Manual

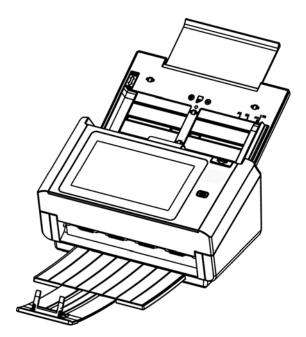

Regulatory model: FL-1801H

Avision Inc.

Copyrights and Trademarks

Ethernet is a registered trademark of Xerox Corporation.

Microsoft, Windows 7, Windows 8, and Windows 10 are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Other product names used herein are for identification purposes only and may be trademarks of their respective companies. We disclaim any and all rights to those marks.

Warranty

The information contained in this document(s) is subject to change without notice. The manufacturer makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of fitness for a particular purpose. The manufacturer shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Safety Information

When using this equipment, the following safety precautions should always be followed.

Safety During Operation

In this manual, the following important symbols are used:

WARNING:

Indicates potentially hazardous situations, which if instructions are not followed, could result in death or serious injury.

▲ CAUTION:

Indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.

Important:

Indicates operational requirements and restrictions. Please read and follow these instructions to ensure a proper operation and to avoid damage to the machine.

Note:

Indicates further explanation or clarification. Reading this is highly recommended.

▲ WARNING:

To avoid hazardous electric shock or fire, do not remove any covers or screws other than those specified in this manual.

CAUTION:

- ✓ To reduce the risk of fire, use only no.26AWG or larger telecommunication line cord.
- ✓ Disconnect the power plug by pulling the plug, not the cable.
- ✓ Do not touch the metal fingers of the ADF pad module. The edges are sharp and touching them may result in injury.

Precautions

- Do not install the equipment near heating or air conditioning units.
- Do not install the equipment in a humid or dusty place.
- Place the equipment securely on an even, flat surface. Tilted or uneven surfaces may cause mechanical or paper-feeding problems.
- Retain the box and packing materials for shipping purposes.

Federal Communications Commission (FCC) compliance information statement

Part 15

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CE European Union Regulatory Notice

Products bearing the CE marking comply with the following EU Directives:

- Low Voltage Directive 2014/35/EC
- EMC Directive 2014/30/EC
- Restriction of the use of certain hazardous substances (RoHS) Directive 2011/65/EU
- RED (Radio Equipment Directive) (2014/53/EC)

CE compliance of this product is valid if powered with the correct CE-marked AC adapter provide by Avision.

This product satisfies the Class B limits of EN55022, EN55024, safety requirements of EN 60950 and ROHS requirements of EN50581.

*This machine is certified as Class 1 LED product.

*Note the operating temperature for the battery is from -20° to 60° C. And the operating temperature for the product is from 10° to 35° C.

If the operating temperature for the battery is outside the range of $-20^{\circ} \sim 60^{\circ}$ C, it may cause cracking, rupturing, bursting, emission of flame or expulsion of molten metal to the outside of the equipment enclosure.

Product Safety Guide

Please clearly read all these instructions, and follow all instructions and warnings before installing and using the device.

The following indications are used in this document to obviate any chance of accident or damage to you and/or the device.

[▲] WARNING	Indicates potentially hazardous situations, which if instructions are not followed, could result in death or serious injury.
\triangle caution	Indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.

A WARNING

- Use only the AC power adapter that came with your device. Using any other AC power adapter could cause fire, electrical shock, or injury.
- Use only the AC power cord and USB cable that came with your device and avoid abrasions, cuts, fraying, crimping, and kinking. Using any other AC power cord and USB cable could cause fire, electrical shock, or injury.
- Do not place objects on top of the AC power cord, and do not allow the AC power adapter or the AC power cord to be stepped on or run over.
- Place the device and its AC power adapter near an electrical outlet where the AC power adapter can easily be unplugged.
- If you use an extension cord with the device, make sure that the total ampere rating of the devices plugged into the extension cord does not exceed the cord's ampere rating.
- Place the device close enough to the computer so that the interface cable can easily reach between the device and the computer.
- Do not place or store the device or its AC power adapter:
 - Outdoors
 - Near excessive dirt or dust, water, or heat sources
 - In locations subject to shocks, vibrations, high temperature or humidity, direct sunlight, strong light sources, or rapid changes in temperature or humidity
- Do not use the device with wet hands.
- Never disassemble, modify, or attempt to repair the AC power adapter, device, or device option by yourself, except as specifically explained in the device's documentation. This could cause fire, electrical shock, or injury.
- Do not insert objects into any opening, as they may touch dangerous voltage points or short-out components. Beware of electrical shock hazards.
- Unplug the device and the AC power adapter, and refer servicing to qualified service personnel under the following conditions:
 - The AC power adapter or plug is damaged.
 - Liquid has entered the device or the AC power adapter.
 - Object has entered the device or the AC power adapter.
 - The device or the AC power adapter has been dropped, or the case has been damaged.
 - The device or the AC power adapter does not operate normally (i.e. appearance of smoke, strange smell, odd noise, etc.), or exhibits a distinct change in performance
- Unplug the device and the AC power adapter before cleaning.

CAUTION:

- Do not attempt to operate the product in temperature outside the range of -20°~60° C. If so, this may cause cracking, rupturing, bursting, emission of flame or expulsion of molten metal to the outside of the equipment enclosure.
 Note the the operating temperature for the battery is from -20° to 60° C and the operating temperature for the product is from 10° to 35° C.
- Do not locate the device on rackety or aslope tables. Do not locate the device on unstable surface. The device may fall down and this may result in injury.
- Do not place heavy objects on the unit. It may cause unbalance and the device may fall down. This may result in injury.
- Store the AC Power cord/USB cable bundled out of the reach of children to avoid the risk of injury.
- Keep plastic bags bundled out of the reach of children to avoid the danger of suffocation.
- If you are not going to use the device for a long period, unplug the AC power adapter from the electrical outlet.

Disposal of Waste Equipment by Users in Private Union



This symbol on the product or on its packaging indicates that the product can not be disposed of with your other household waste. Instead it should be sent to appropriate facilities for recovery and recycling in an effort to protect human health and the environment. Fore more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



As an ENERGY STAR[®] Partner, Avision Inc. has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

System Requirements

CPU:	Intel [®] Core™ 2 Duo or higher
Memory:	32 bit: 2 GB 64 bit: 4 GB
Optical Drive:	DVD-ROM Drive
USB Port:	USB port 3.1 Gen 1 (compatible with USB 2.0)
•	Windows 10 (32 bits/64 bits), Windows 8 (32 bits/64 bits), Windows 7

Introduction

Thank you for purchasing the network scanner. With the product, you can instantly scan single-sided or double-sided document(s) and deliver the electronic images to various destinations including E-mail addresses, ftp servers, network folders, or cloud servers such as Dropbox, or Evernote. In addition, the product also allows you to save the scanned image to an inserted USB flash drive, or the product's own memory.

If required, the product can be used as a regular scanner through USB or wired network connection to start a scan with your TWAIN-compliant software application and optimize your scanned images with various advanced image enhancement tool. You may refer to *Chapter 7 Using the Product As a Regular Scanner* in this manual on how to use this function.

Various Scan to Destinations

Scanning and Sending Your Images to an E-mail address:

Connected to an ethernet network and a SMTP server, the product allows you to transmit document(s) to your E-mail as attachment. With a touch of the E-mail key and the selection of your recipients' E-mail addresses, the document(s) is/are first scanned and converted into an image file, and then transmitted to remote recipients within minutes.

Scanning and Sending Your Image to a Network Folder:

The product allows you to send the scanned documents to a server or a personal computer's file folder over intranet with FTP (File Transfer Protocol), FTPS (FTP Secure), FTPES, SMB (Server Message Block Protocol). This feature off-loads the mail server from handling large attachments.

Scanning and Saving Your Images to a USB Flash Drive:

By plugging a USB flash drive into the USB port of the product, the product allows you to scan your document and save the scanned images to your USB flash drive.

Scanning and Saving Your I mages to the Product's Memory:

By selecting a public folder as a filing destination, the product allows you to scan and save the scanned image in the product's memory and access the file from the product's embedded web page.

Preview:

Before sending your documents over the network, the product allows you to view a reduced size of the scanned document to verify if the scanned image has been skew, or upside down. If one of the pages is skew, you can delete and rescan that page to save your time.


Scancast:

Scan and broadcast the images respectively to various destinations including a cloud server, a public folder (the product's memory), a USB flash drive, E-mail addresses, a file server on the network such as FTP \$ FTPS \$ SMB.

Using Convenient Shortcuts:

By assigning your frequently used settings and scan to destinations as Shortcuts, the product allows you to streamline your workflow and complete your scanning task in just one press of a button.

Package Items

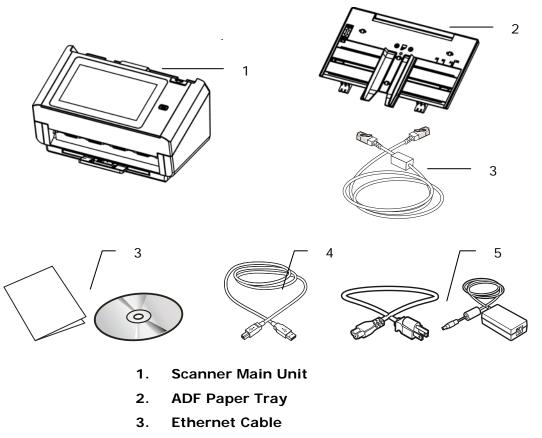


- 4. Software CD/Quick Guide
- 5. USB Cable
- 6. Power Adapter & Power Cord

Note:

- 1. Only use the AC adapter DA-48M24 by APD included in the machine. Using other AC adapters may damage the machine and void the warranty.
- 2. Please unpack the packing carefully, and check the contents against the checklist. If any items are missing or damaged, please contact your dealer immediately.


External View

The Front View

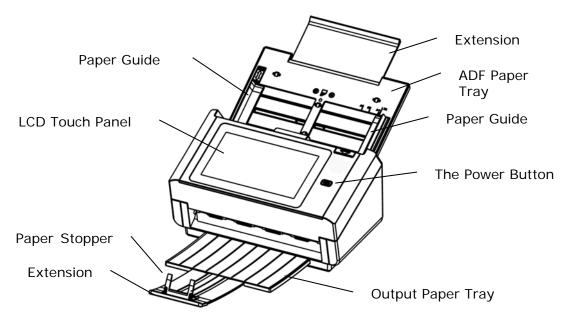

Part Name	Function
Extension	Can be pulled out and adjusted to the size of the document being scanned.
ADF Paper Tray	Load the document onto this part when scanning document.
Paper Guides	Adjusts to the width of the documents to prevent skewing of the scanned pages.
LCD Touch Panel	Operate the scanner through the touch screen.
Power Button	Press to turn on the power.
Output Tray	Open to collect the document after scanned.
Extension	Pull it out. Documents are ejected from the ADF to the tray.
Paper Stopper	Adjust to the length of the documents to prevent them from falling apart.

The Rear View

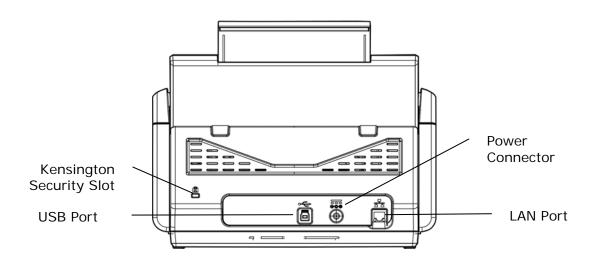


Part Name	Function
LAN Port	Connect the scanner to network with a LAN cable.
USB Port	 Connect to your computer via the supplied USB cable to use the device as a regular scanner. Connect to your computer via the supplied USB cable to download firmware if required.
Power Connector	Connect the AC adapter to the scanner.
Kensington Security Slot	Attach to a lock to secure the scanner.

The Side View



Part Name	Function
USB Flash Drive	Used to insert a USB flash drive.

Removable Parts

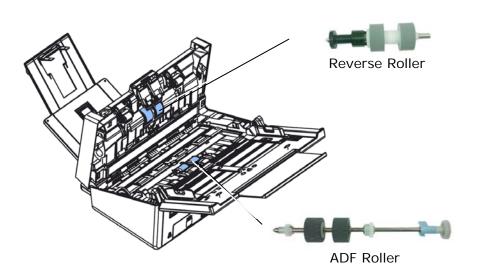

Pre-installation Information

Preinstallation

The product has to be setup properly on your network to perform E-mail and filing functions. The following network parameters have to be set.

Important!

Make a copy of the following table and ask your Network Administrator to complete the information.

1.	DHCP Enable:		
2.	IP Address:	•	
3.	Subnet Mask:	•	
4.	Gateway IP:	•	
5.	DNS Server:	•	
6.	Mail Server:	•	
7.	Port # of Mail		
	Server		

Explanation of contents:

1. *DHCP Enable:	Choose Yes to obtain IP/subnet/gateway/DNS server/WINS server addresses automatically from DHCP server.
2. *IP Address:	The Internet Protocol (IP) address assigned to your machine by your network administrator or by DHCP server.
3. Subnet Mask:	The net mask address assigned by your network administrator or by DHCP server.
4. Gateway IP:	The gateway IP address assigned by your network administrator or by DHCP server or by DHCP server.
5. *DNS server:	The IP address of DNS server assigned by your network administrator.

Note:

- DHCP server: With DHCP (Dynamic Host Configuration Protocol), a host can automatically be given a unique IP address each time it connects to a network--making IP address management an easier task for network administrators. If the DHCP server is available from your network, you do not need to enter TCP/IP, subnet mask, gateway, and DNS information. Instead, this information will be automatically given for the product.
- 2. IP Address: An IP (Internet Protocol) address uniquely identifies a host connection to an IP network. System administrator or network designer assigns the IP address. The IP address consists of two parts, one identifying the network and the one identifying your node. The IP address is usually written as four numbers separated by periods. Each number can be zero to 255. For example, 10.1.30.186 could be an IP address.
- **3.** DNS: Stands for Domain Name System. The DNS server identifies hosts via names instead of IP addresses. If the DNS server is available on your network, you can enter the domain name instead of digits for the IP address.

Frequently Used Buttons on the Touch Screen

The following table lists the frequently used buttons and their functions on the touch panel:

	The [Start] button: Choose to start scanning the document and sending the scanned image to E-mail, Public Folder, USB Flash Drive, or other destinations.
Б	The [Back] button: Choose to leave current screen and return to previously operational screen.
	The [Home] button: Choose to leave current screen and return to the main operational screen.

2 Installing Your Machine

This chapter is specifically targeted to the persons who are responsible for the administration of the product. It is recommended that the administrator read this chapter before installing the machine.

Minimum Configuration Requirements

To use the product as a network scanner, the following configuration is required:

To send E-mails from the product:


- TCP/IP network
- A Mail server

To file document(s) via intranet


• FTP, FTPS or SMB protocol environment

Installing the ADF Paper Tray

1. Hold the ADF Paper Tray and insert two pins to the holes on the top of the scanner as shown.

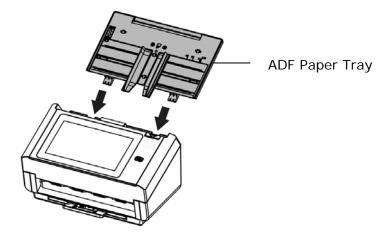


- 2. Pull out the extension to the length of the document.
- 3. Pull the Output Tray and raise the paper stopper to prevent the paper from falling.

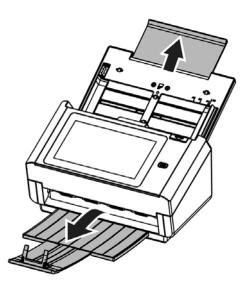


Connecting the Ethernet Cable

- 1. Connect one end of your Ethernet LAN cable to an available port of your Ethernet Hub.
- 2. Connect the other end to the port marked $\mathbf{\Delta} \mathbf{\Delta}$ at the back of the product.

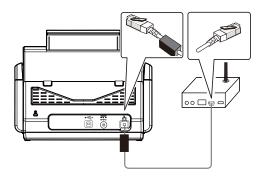


Connecting the Power and Turning on the Machine

1. Connect one end of the power cable to the power receptacle of the product.

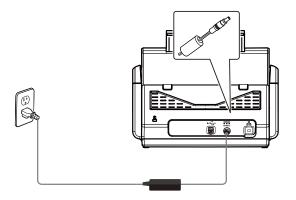

2. Connect the other end to an appropriate power outlet.

3. Press the [**Power**] button to turn on the product. The Power LED lights in green and the LCD Touch Panel will be displayed with a Home screen as illustrated.

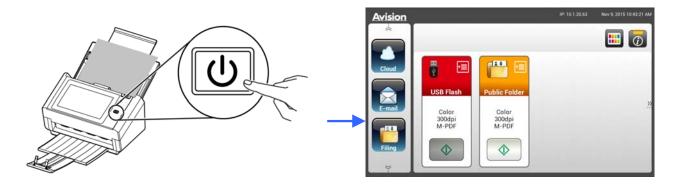

Note:

If the product will not be used for a long time, press the Power button for 3 seconds to turn off the power. Then unplug the product from the power outlet.

Turning Off the Machine

 Press the **Power** button for at least 2 seconds. A Confirmation dialog box appears.



2. Tap [Power off] to turn off the machine or reboot to restart the machine.

Power off	
The machine is goi	ng to power off.
Cancel	ОК

3. Tap **[OK]** to turn off the machine.

Selecting Your Language

The product provides various languages on the LCD Touch Panel. Choose your desired language to be displayed on the LCD Touch Panel.

1. Press the [**Power**] button to turn on the product. The LCD Touch Panel will be prompted with a Home Screen as indicated.



 On the LCD Touch Panel, tap [Settings] > [Device Management] >[Language] in succession and then choose your desired language. Choice : English, Chinese Traditional, Chinese Simplified, Spanish, Portuguese, Hebrew.

Avision Avi			Filing Default
Device Management			
C Time Zone	Settings >> Gener	al	
Power Saving	Language		Cancel Save
auto Power OFF	English		
Screen OFF	עברית		
	中文 (简体)		
Canguage	中文(繁體)		
Admin. Profile			
Cancel			

3. Tap [Save] to save the setting.

Setting Date and Time

To let the product show current date and time, please set your date and time for the product before using it.

 On the Home Screen of the LCD Touch Panel, tap [Settings]>[Device Management]>[Date] in succession and then set your current date.



- 2. Tap [Save] to save the setting and go back to the previous screen.
- 3. On the [Device Management] screen, tap [Time] to set your current time.
- 4. Tap [Save] to save the setting and go back to the previous screen.

Specifying the Product's TCP/IP Address

To let other devices on the network identify the product, you need to set an IP address for the product. Follow these steps to set an IP address:

1. On the Home Screen of the LCD Touch Panel, tap

[**Settings**]>[**Network**]>[**Wired**] in succession and then set the IP address for the product.



- Check [DHCP] if you wish to enable DHCP.
- Check [Static IP] if you wish to specify a static IP address. If [Static IP] is selected, tap the IP Address/Subnet Mask/Gateway
 IP/DNS Server field respectively to bring up the soft keyboard and then enter the relevant values.
- 2. Tap [Save] to save the setting and go back to the previous screen.

Note:

- If the system administrator has chosen DHCP, then the IP address of TCP/IP, gateway, subnet mask, and DNS server will be automatically given.
- When installing the product for the first time, it is recommended that the Administrator retain the default system settings. The settings can be customized at a later date once you are familiar with the operation and functionality.

Specifying the Product's Mail Server

To send the scanned image to a recipient via E-mail, you need first specify your mail server information on the product. Follow these steps to set your mail server:

On the Home Screen of the LCD Touch Panel, tap
 [Settings]>[Network]>[Mail Server] in succession and then set your
 mail server information.





On the **Mail** server option, enter the IP address and port number of your mail server.

- On the **Authentication Method** option, tap **[ON]** to enable it or **[OFF]** to disable it.
- Tap anywhere respectively on the Login Name/Password/Mail Server/ Port# field to bring up the soft keyboard and then enter the relevant values.
- 2. Tap [Save] to save the setting and leave the screen.

Creating Your Address Book

To save the time in typing the E-mail address, you can create your address book to speed up the process.

 On the Home Screen of the LCD Touch Panel, tap [Settings]>[Address Book]>[New] in succession and then enter your address information.



Canc

1

2. Tap [Save] to save the setting and leave the screen.

Creating Your Filing Profiles

To store your scanned image to the network folders, you need to first set up a few network folders including FTP, FTPS, or SMB to store the images.

 On the Home Screen of the LCD Touch Panel, tap [Settings]>[Filing Profiless]>[New] in succession.



 Refer to the following table to create your Filing Profiles. Tap [Save] after the settings have been made satisfactory.

Item	Description
Profile Name	Enter your profile name.
Scan to	Choose your [Scan to] destination protocol.
	Choice includes * FTP: //, FTPS: //, SMB: \
	USB, Public Folder.
	USB: Store the scanned image to an inserted USB
	flash drive.
	Public Folder: Store the scanned image to the
	memory of the product and then access the image via
	the product's embedded web page.

Target URL	If FTPS, FTP or SMB is selected, enter the URL
	address. You can either enter a domain name or an IP
	address with the directory path.
Target URL	Enter the IP address of your scan to destination.
Port #	Enter the port number for the [Scan to] server.
Passive Mode	Set your FTP connection mode. Choice: On/Off
	(default: Off).
Login Name	Enter your login name to use the designated folder.
Password	Enter your password to use the designated folder.
File Name	Enter your default file name.
Output Color	Choose your desired default output color for the scanned image. Choice: *Color, Gray, B/W
Document Side	Choose your desired default scanning side.
	Choice: *1-Sided Face Down, 1-Sided Face Up,
	2-Sided
File Format	Choose your desired default file format for the
	scanned image.
	Choice: JPEG, TIFF (One-Page TIFF), M-TIFF
	(Multi-Page TIFF), PDF (One-Page PDF),
	*M-PDF (Multi-Page PDF), Searchable PDF,
	PDF/A(M-PDF), PNG
Resolution	The resolution is measured in pixels per inch (ppi)
	(sometimes referred to as dots per inch or dpi). Higher resolutions result in more detail in the scan,
	slower scanning and in general, greater file sizes.
	When OCR (Optical Character Recognition) is to be
	When OCR (Optical Character Recognition) is to be performed on a scan, 300dpi should be used for most
	When OCR (Optical Character Recognition) is to be performed on a scan, 300dpi should be used for most languages except Asian languages. For Asian
	When OCR (Optical Character Recognition) is to be performed on a scan, 300dpi should be used for most languages except Asian languages. For Asian languages, 400 dpi is recommended. Image: All the state of the stat
	When OCR (Optical Character Recognition) is to be performed on a scan, 300dpi should be used for most languages except Asian languages. For Asian languages, 400 dpi is recommended.Image: A comparison of the state of the
	When OCR (Optical Character Recognition) is to be performed on a scan, 300dpi should be used for most languages except Asian languages. For Asian languages, 400 dpi is recommended. Image: All the state of the stat
	When OCR (Optical Character Recognition) is to be performed on a scan, 300dpi should be used for most languages except Asian languages. For Asian languages, 400 dpi is recommended.Image: A comparison of the scale of the
*: Factory default	When OCR (Optical Character Recognition) is to be performed on a scan, 300dpi should be used for most languages except Asian languages. For Asian languages, 400 dpi is recommended.Image: Alter and the second dpi is recommended.

3 Operation

Document Loading Tips

Before using the ADF (<u>Auto Document Feeder</u>), please make sure that your paper meets the following specifications:

- Document(s) can range in size from 50 x 50 mm (2 x 2 in.) (A8) to 216 x 356 mm (8.5 x 14 in.) (Legal).
- Document(s) can range in weight from 7 to 110 lbs $(27 \sim 413 \text{ g/m}^2)$
- ID cards up to 1.25 mm (0.05 in.) thick
- Document(s) should be square or rectangular and in good condition (not fragile or worn).
- Document(s) should be free of curl, wrinkle, tears, wet ink, or punch holes.
- Document(s) should be free of staples, paper clips, paper sticky notes.


Fanning Your Document

Note: To avoid occasional multi-feeds or paper jams, please fan your documents and align the top edges before feeding them into the scanner.

1. Hold both ends of the documents and fan them a few times.




- 2. Rotate the documents by 90 degrees and fan them in the same manner.
- 3. Align the edges of the documents in a step-like pattern (see picture below).

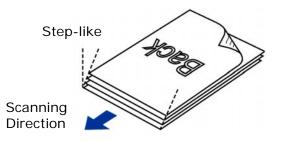

Document Feeding

1. Load the stack of document **face down** with the top of the pages pointing into the feeder.

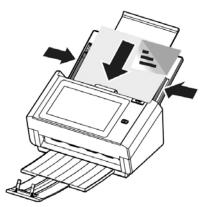

2. Verify that the paper guides are aligned with the edges of the stack.

Note: The [Paper Width] switch:


If your document width is 216 mm (8.5 in.):


If your document width is 216 mm (8.5 in.), slide the [**Paper Width**] switch **DOWN** to fix your paper guide to conveniently load the letter-size document.

If your document width is larger than 216 mm (8.5 in.):

If your document width is larger than 216 mm (8.5 in.) such as invoices with punch holes, slide the [**Paper Width**] switch **UP** and move the paper guide to the right end to load your documents.

Slide **DOWN** the [**Paper Width**] switch to set your paper width to 216 mm (8.5 in.)

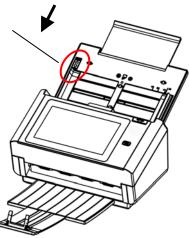





Scanning a Stack of Document with Various Sizes and Weights

When scanning a batch of documents with different sizes and weights, be sure to follow the following guidelines to avoid a skewed image or a paper jam:


1. Align the documents **TOP EDGE** first in the sequence of paper size from large to small.

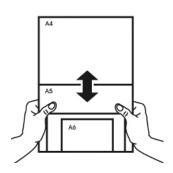


2. If two pages are of the same size yet with different weight, arrange these pages in the sequence of paper weight from heavyweight to lightweight.

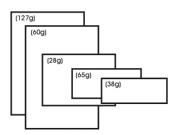

3. Align the edges of the documents by tapping the bottom of the stack against the table top.

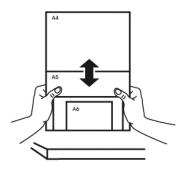

4. Center these pages in the document feeder and make sure that the edges of page of the largest size slightly touch the Paper Guide.



Scanning and Sending Your Document to E-mail Addresses

Basic Operation

Using the Default Setting

- Load your document in the ADF with the 1st page facing down and the top of the pages pointing to the feeder.
- Press the E-mail button on the Home screen. The following E-mail main screen will be displayed in the right side.

E-mail	R.					2016/11/16 0	9:06
	Basic	E-mail Options	Advanced Options	Layout Adjustment	Bind		
Cloud E-mail	To				0		
	Bcc						»
	Document Sid	les 1-Sided Fac		ut Color		2	
	Subject	Down		Color		>	
	Please enter	email subject		MPD)F	>	
	Resolution	200dpi	>			•	
						<u> </u>	

3. Enter the E-mail address.

- Touch any place on the "**To**" field (the empty box in the center) to bring up the "soft keyboard" to type your email address. Tap the 2nd field to enter your 2nd E-mail address.

- You can delete the E-mail address by touching the [**Delete**] button after you input your email address.

- 4. Enter or select CC and BCC address as well, if necessary. Enter the subject of your E-mail via the soft keyboard. If not, the "Default Subject" will be displayed in recipients' E-mail message.
- 5. Check if the Document Sides, Output Color, or File Format meets your requirements. If not, change the settings to suit your needs.
- 6. Tap the [Start] button (
- 7. The product starts scanning and the preview image will be displayed.

	Amsterdam	Remove
	The same the source of the sou	()
71	The start of the s	Total 1 pages

- 8. On the Preview screen,
 - **Start**: If the scanned image is OK, press the [**Start**] button () on the touch panel to distribute the scanned image.
 - Remove: If the scanned image is not satisfactory, tap the [Remove]
 button (Remove) to delete the scanned image.
 - Insert: You may also insert more pages by taping the [Insert]
 Insert
 button.
 - Cancel: If the scanned image is not OK, tap the [Cancel] button
 () to abort the job.
- 9. In a second, the scanned image will be sent to your E-mail addresses.

Advanced Operation

Using Special Settings

 Load your document in the ADF with the 1st page facing down and the top of the pages pointing to the feeder.



Press the E-mail button on the Home screen. The following E-mail main screen appears.

E-mail	2016/11/16 09.06
	Basic E-mail Advanced Layout Bind I III III
Cloud	To
E-mail	Cc 0
	Document Sides Output Color
	Image: Subject I-Sided Face Down Color
Filing	Please enter email subject MPDF >
	200dpi

3. Enter your E-mail address.

- Touch any place on the "To" field (the empty box in the center) to bring up the "Soft Keyboard" to type your email address. Press **Enter** to type the 2nd E-mail address and then click **Return** to return to the **E-mail** main screen.

- 4. Enter or select CC and BCC address as well, if necessary. Enter the subject of your E-mail via the soft keyboard. If not, the "Default Subject" will be displayed in recipients' E-mail message.
- 5. On the **Basic** screen, check if the document sides, output color, or file format meets your requirements. If not, change the settings to suit your needs.
- 6. Tap the E-mail Options tab to prompt the E-mail Options screen. Type your E-mail message if necessary in the Message field via the soft keyboard, enter the attachment name of the scanned document, and the "Reply to" address if necessary. (For more information about the settings, see the settings description in the next two pages.)
- 7. Tap the Advanced Settings tab to prompt the Advanced Settings screen. Change the density, contract, quality level, and resolution if the default settings are not satisfactory. (For more information about the settings, see the settings description in the next two pages.)

- 8. Tap the **Layout Adjustment** tab to prompt the **Layout Adjustment** screen. Change original size, and preview if the default settings are not satisfactory. (For more information about the settings, see the settings description in the next page.)
- 9. Press the [Start] button to start a scan.
- **10.** The product starts scanning and the preview image will be displayed.



- 11. On the Preview screen,
 - **Start**: If the scanned image is OK, press the [**Start**] button

) on the touch panel to distribute the scanned image.

- **Remove**: If the scanned image is not satisfactory, tap the [**Remove**] button () to delete the scanned image.
- Insert: You may also insert more pages by taping the [Insert]
 Insert
 () button.
- Cancel: If the scanned image is not OK, tap the [Cancel] button
 () to abort the job.
- **12.** In a second, the scanned image will be sent to your E-mail addresses.

Settings Descriptions

Basic			
Item	Description		
Document	Choice: *1-Sided Face Down, 1-Sided Face Up, 2-Sided		
Sides	1-Sided Face Down: Choose to scan single side of your		
	document and make sure the scanning side faces down on the		
	document feeder.		
	1-Sided Face Up: Choose to scan single side of your		
	document and make sure the scanning side faces up on the		
	document feeder.		
	2-Sided: If your original is a double-sided document, choose		
	2-Sided to scan both sides of your document.		
Subject	Enter text for your email subject. Up to 64 characters are allowed.		
Resolution	The resolution is measured in pixels per inch (ppi) (sometimes referred to as dots per inch or dpi). Higher resolutions result in more detail in the scan, slower scanning and in general, greater file sizes. When OCR (Optical Character Recognition) is to be performed on a scan, 300dpi should be used for most languages except Asian languages. For Asian languages, 400 dpi is recommended.		
Output Color	Choose your desired output color for your scanned image. Choice: *Color, Gray, B&W		
	Color : Choose Color if you wish to scan a color image for		
	your original in color. Gray: Choose Gray image if your original contains actual		
	shades of gray.		
	Choose B&W if your original contains only text, pencil or ink sketch.		

File Format	Choose the file format for your scanned image. Choice: JPEG, TIFF (One-Page TIFF), M-TIFF (Multi-Page TIFF), PDF (One-Page PDF), *M-PDF (Multi-Page PDF), Searchable PDF, PDF/A(M-PDF), PNG		
	 Note: MPDF or MTIFF file format allows you to scan multi-page document and convert it to a single file. PDF file format allows you to save one image page in a single file. JPEG file format is available for Color and Gray images only. TIFF file format is available for B&W images only. 		
* Factory Defa	ault		

E-mail Option	ns
Item	Description
From	Enter the " From " address of your outgoing mails from the product. If an E-mail can not be sent, notification is returned to this address. If the administrator has not set the device's email account in the Mail Server settings, you can enter the email address here. This is the " From " address in your E-mail when you receive an email from the product.
Reply To	Enter a " Reply to " address if you wish to specify a reply address which is different from the "From" address. Up to 60 characters can be entered in the field. To enter the address, you may press anywhere on the "Reply To" field to bring up the soft keyboard to type the address.
Message	Type your email message here. To enter the text, you may press anywhere on the " Message " field to bring up the soft keyboard to type the text.
File Name	Enter the file name for your scanned document without extension. If you have not entered a value in the box, the system will bring you a default file name, image. Using #n #Y#M#D#h#m#s makes file name change as time goes. (n, Y, M, D, h, m, and s represent series number, year, month, date, hour, minute, and second respectively.) For example, type file name: test#n#D will bring your filing file name as test000105
File Separation	Limit the file size of the attachment of each outgoing email to avoid the size limitation from SMTP servers. Use the combo box to select from the list.
	Choice: 5MB/10M/20M/30MB/*Unlimited
* Factory Defa	ault

Advanced Settin	iys
	Description
	7 levels of density are provided to adjust the lightness or contrast of your document. If your original document is too light or too dark, you can use this setting to adjust the scanned image. Choice: Level -3~3 . Default value: 0
Contrast	Image: state of the state of
	Choice: Level -3~3. Default value: 0
	Adjust the Contrast slider right or left to increase or decrease the contrast.
Blank Page	If you wish to remove the blank page, you can adjust the sensitivity value to define the threshold. The higher the value, the more the sensitivity.
Size	The options will be available only when "JPEG" format is selected in the Attachment Format option. Choose the quality level of your scanned image. The higher the quality, the larger file size.
	Choice: *Normal Quality/Small File, Higher Quality/Larger File, Highest Quality/Largest File
Туре	Choose your document type. Choice: *Mixed, Photo, Text Text: Suitable for document contains pure text. Photo: Suitable for document contains photos. Mixed: Suitable for common business document with photo or text.
Detection	Choose if you wish to enable the Multi-Feed Detection via ultrasonic unit. Ultrasonic Detection allows you to set overlapped document by detecting paper thickness between documents. Choice: On/*Off
• •	Used to adjust the brightness of the entire image. The smaller the number, the higher the brightness. Range: 128~*255
* Factory Default	

Layout Adjust	nents
Item	Description
Original Size	Press to select scan area.
	• Auto: Let the machine automatically detect the scan area
	according to your original.
	Detectable size: A4 A5 A6 B5 LGL LTR
	• Preset Scan Area : Specify your scan area from a list of A4,
	A5, B5, LTR (Letter), and LGL (Legal).
	Choice: *Auto/Preset Scan Area
Auto	When Auto Orientation is turn On, images can be rotated to
Orientation	their proper orientations based on their contents. (*: off)
Preview	Turn on to display preview image in a low resolution to check if the scanned image is correct. Choice: *ON, OFF
* Factory Defau	It

Sending Your Document to a Network Folder, a USB Flash Drive or a Public Folder

Important:

To send your scanned images to a network folder such as FTP, FTPS, or SMB, make sure you have the privilege to access the network folders. For example you need to create a login name and password first.

Basic Operation

Using the Default Settings

- Load your document in the ADF with the 1st page facing down and the top of the pages pointing to the feeder.
- 2. Press the **Filing** button on the Home screen. The following **Filing** main screen will be displayed.

Filing			2015/12/01/ 10:58
	Basic Advanced Options	Layout Adjustment	E
Cloud	Scan to	ftp	^
			1
E-mail	Document Sides	Output Color	~ <u>»</u>
	F. Down	Color	
Filing	Ex:DOC_#Y#M#D#h#m#s#n	MPDF >	
2	Resolution 200dpi >		

- 3. Choose a [Scan to] destination to store your scanned image.
 - Choose Network or Local.
 - If **Network** is selected, the available network servers will be displayed at the right box. You may use the **Up-arrow** or **Down-arrow** button to scroll from the list.
 - If **Local** is selected, **USB** and **Public Folder** will be displayed at the right box. If USB is selected, make sure a USB flash drive has been inserted to the USB flash drive port of the product.

If **Public Folder** is selected, the scanned image will be stored in the product's memory. Enter the PIN number (folder name) during scanning and then access the scanned image via the product's embedded web page. (Refer more detailed information on subsequent section - Customizing the Product's Settings via the Embedded Web Page.)

- 4. If desired, enter the file name prefix in the [File Name] field for the scanned document.
- 5. Check if the document side, output color, or file format meets your requirements. If not, change the settings to suit your needs.
- 6. Tap the [**Start**] (button. The scanner starts scanning your document.
- 7. The product starts scanning and the preview image will be displayed.



- 8. On the Preview screen,
 - Start: If the scanned image is OK, press the [Start] button (on the touch panel to distribute the scanned image.
 - **Remove**: If the scanned image is not satisfactory, tap the [**Remove**] button () to delete the scanned image.
 - Insert: You may also insert more pages by taping the [Insert]

) button.

- Cancel: If the scanned image is not OK, tap the [Cancel] button
 () to abort the job.
- 9. In a second, the scanned image will be sent to your email addresses.

Advanced Operation

Using Special Settings

- Load your document in the ADF with the 1st page facing down and the top of the pages pointing to the feeder.
- 2. Press the **Filing** button on the Home screen. The LCD Touch Panel prompts the following **Filing** main screen.

Filing			2015/12/01/ 10:58
	Basic Advanced Options	Layout Adjustment	i
Cloud	Scan to	ftp	^
	Network		1
			✓
E-mail	Document Sides	Output Color	
	File Name	File Format	
Filing	Ex:DOC_#Y#M#D#h#m#s#n Resolution	MPDF >	
»)	200dpi >		

- 3. Choose your [Scan to] destination to store your scanned image.
 - Choose Network or Local.
 - If **Network** is selected, the available network servers will be displayed at the right box. You may use the **Up-arrow** or **Down-arrow** button to scroll from the list.
 - If **Local** is selected, **USB** and **Public Folder** will be displayed at the right box. If **USB** is selected, make sure a USB flash drive has been inserted to the USB flash drive port of the product.

If **Public Folder** is selected, the scanned image will be stored in the product's memory. Enter the PIN number (folder name) during scanning and then access the scanned image via the product's embedded web page. (Refer more detailed information on subsequent section - Customizing the Product's Settings via the Embedded Web Page.)

- 4. On the **Basic** screen, enter your desired file name and check if document side, output color, or file format meets your requirements. If not, change the settings to suit your needs.
- 5. Tap the Advanced Settings tab to prompt the Advanced Settings screen. Change the density, contract, resolution, and quality level if the default settings are not satisfactory. (For more information about the settings, see the settings description described in the preceding section – Scanning and Sending Your Documents to E-mail Addresses on page 31.)

- 6. Tap the Layout Adjustment tab to prompt the Layout Adjustment screen. Change original size and preview if the default settings are not satisfactory. (For more information about the settings, see the settings description described in the preceding section – Scanning and Sending Your Documents to E-mail Addresses on page 30.)
- 7. Tap the **Start** button. The scanner starts scanning your document.
- 8. The product starts scanning and the preview image will be displayed.



- 9. On the Preview screen,
 - Start: If the scanned image is OK, press the [Start] button (on the touch panel to distribute the scanned image.
 - Remove: If the scanned image is not satisfactory, tap the [Remove]
 button (

 \bigcirc

button () to delete the scanned image.

Insert: You may also insert more pages by taping the [Insert]
 Insert
 button on the bottom of the screen.

Cancel: If the scanned image is not OK, tap the [Cancel] button
 () to abort the job.

10. In a second, the scanned image will be sent to your specified network folder.

Sending Your Document to Clouds

Basic Operation

Important:

2.

To send your scanned images to a cloud server such as DropBox, Google Drive, or Evernote, make sure you have the privilege to access the cloud servers. For example you need to create a login name and password first.

Using the Default Settings

 Load your document in the ADF with the 1st page facing down and the top of the pages pointing to the feeder.

Cloud

Press the **Cloud** button on the Home screen. The LCD Touch Panel prompts the following **Cloud** main screen.

Cloud	-					2015/12/01/ 11:16
	Basic	Advanced Options	Layout Adjustment			i
	Scan to					
Cloud	DropBox					^
	Evernote					~
E-mail	Document Side		Output Color			
	│ (*'┫⋼目	F. >		Color	>	
	File Name		File Format			
Filing	Ex:DOC_#Y#M	#D#h#m#s#n		MPDF	= >	
Filing	Resolution					
¥	200	dpi >				

- 2. Choose your desired cloud server to save your scanned images. Choice: Dropbox, Evernote, Google Drive.
- 3. Check if the document side, output color, or file format meets your requirements. If not, change the settings to suit your needs.
- 4. Tap the **Start** button. The scanner starts scanning and a Preview screen will be prompted.

•	Amsterdam		Remove
	The second secon		
7	- A grant - Y can be de a construit a la factoria de la factori	Total 1 pages	\bigcirc

- 5. On the Preview screen,
 - Start: If the scanned image is OK, press the [Start] button \Diamond) on the touch panel to distribute the scanned image. (
 - **Remove**: If the scanned image is not satisfactory, tap the [**Remove**] button () to delete the scanned image.

- **Insert**: You may also insert more pages by taping the [Insert] () button.
- Cancel: If the scanned image is not OK, tap the [Cancel] button) to abort the job.
- The product begins to upload your scanned images to your specified cloud 6. server.

On the web site of your specified cloud server, you will be required to complete the login and authorization. If successful, your account will be displayed and the scanned image will be stored in the cloud server.

Advanced Operation

Using Special Settings

 Load your document in the ADF with the 1st page facing down and the top of the pages pointing to the feeder.



2. Press the **Cloud** button on the Home screen. The LCD Touch Panel prompts the following **Cloud** main screen.

Cloud			2015/12/01/ 11:16
	Basic Advanced Options	Layout Adjustment	E
	Scan to		
Cloud	DropBox		^
	Evernote		~
E-mail	Document Sides	Output Color	<u>»</u>
	-^/* ▲ ►. ►. ►. ►. ►. ►. ►. ►. ►. ►. ►. ►. ►.	Color >	
	File Name	File Format	
Filing	Ex:DOC_#Y#M#D#h#m#s#n	MPDF >	
Printig	Resolution		
))	200dpi >		

- 3. Choose your desired [Scan to] cloud server to save your scanned images. Choice: Dropbox, Evernote, Google Drive.
- On the **Basic** screen, check if the document sides, output color, or file name meets your requirements. If not, change the settings to suit your needs.
- 5. Tap the Advanced Settings tab to prompt the Advanced Settings screen. Change the density, sharpness, contract, saturation, and quality level and select resolution of the scanned image if the default settings are not satisfactory. (For more information about the scan settings, please refer to the preceding section – Scanning and Sending Your Documents to E-mail Addresses on page 31.)
- 6. Tap the **Layout Adjustment** tab to prompt the **Layout Adjustment** screen. Change original size and original orientation if the default settings are not satisfactory. (For more information about the scan settings, please refer to the preceding section – Scanning and Sending Your Documents to E-mail Addresses on page 33.)
- 7. Tap the **Start** button. The scanner starts scanning your document.

	Amsterdam		Remove
	The second secon		
ħ	The first area of definition of the state of	Total 1 pages	

- 8. On the Preview screen,
 - Start: If the scanned image is OK, press the [Start] button (on the touch panel to distribute the scanned image.
 - Remove: If the scanned image is not satisfactory, tap the [Remove]
 button (
 Bemove
 Bemove
 - Insert: You may also insert more pages by taping the [Insert]
 () button.
 - Cancel: If the scanned image is not OK, tap the [Cancel] button
 () to abort the job.
- 9. The product begins to upload the scanned images to your specified cloud server.

On the web site of your specified cloud server, you will be required to complete the login and authorization. If successful, your account will be displayed and the scanned image will be stored in the cloud server.

Creating a Shortcut Button

By setting frequently used scan settings and destinations as Shortcut on the Home screen, the product helps you to streamline your workflow and complete your scanning task in just one single step.

To create a Shortcut button,

 Select your frequently operational mode on the left panel. For example, E-mail. The E-mail screen will be displayed on the right panel.



2. Select your frequently used E-mail address in the [To]/[CC]/[BCC] field.



to

- 3. On the [E-mail options] screen, type your [From] address.
- Check if any of the scan settings needs to be changed to suit your frequently used E-mail task.
- If the scan settings are satisfactory, tap the [New ShortCut] create your new ShortCut.

6. An [Enter a Shortcut Name] dialog box will be prompted.



7. Enter your shortcut name and tap [**OK**]. For example, bess. The new shortcut button will be displayed on the LCD Touch Panel.



Note:

Follow the similar procedure to create your frequently Cloud or Filing destination to be your ShortCut on the LCD Touch Panel.


Using the Shortcut Buttons

To use a Shortcut button,

1. Tap the [Start] button of your desired ShortCut button on the touch screen.



2. The scanner starts scanning and a preview image will be displayed.

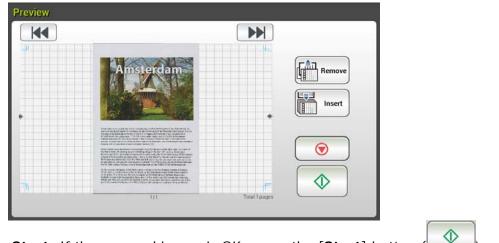

3. On the Preview screen,

- **Start**: If the scanned image is OK, press the [**Start**] button () on the touch panel to distribute the scanned image.
- **Remove**: If the scanned image is not satisfactory, tap the [**Remove**]

button (Remove) to delete the scanned image.

- Insert: You may also insert more pages by taping the [Insert]
- **Cancel**: If the scanned image is not OK, tap the [**Cancel**] button to abort the job.
- 4. The scanned images are sent to your specified destination.

Scanning and Broadcasting Your Images

The Scancast (Scan and broadcast) feature allows you to scan a document first and then send to many destinations respectively.

Basic Operation

Using the Default Settings

 Load your document in the ADF with the 1st page facing down and the top of the pages pointing to the feeder.



2. Press the **Scancast Scancast** button on the touch screen. The following **Scancast** main screen will be displayed.

Scancast	1		2015/12/04/ 03:31
	Basic Advanced Options Document Sides A************************************	Layout Adjustment Output Color Color File Format	*
Filing			•

- 3. If desired, enter the file name prefix in the [File Name] field for the scanned document.
- 4. Check if the document side, output color, or file format meets your requirements. If not, change the settings to suit your needs.
- 5. Tap the [**Start**] (button. The scanner starts scanning your document.
- 6. The product starts scanning and the preview image will be displayed.



- 7. On the Preview screen,
 - Start: If the scanned image is OK, press the [Start] button

) on the touch panel to distribute the scanned image.

• **Remove**: If the scanned image is not satisfactory, tap the

[**Remove**] button () to delete the scanned image.

- Insert: You may also insert more pages by taping the [Insert]
 - (**Cancel**: If the scanned image is not OK, tap the [**Cancel**] button
 - (()) to abort the job.
- 8. If the [**Start**] () button has been selected, the [**Scancast**] window for multiple destinations appears.

I.			Dec 6,2013 3 2234 AM
			5
Cast To			
Cloud	E-mail	Fing	
	Cast To		

- 9. Choose a [Cast To] destination for your scanned image. Choice: Cloud, E-mail, Filing.
 - **Cloud:** Choose your desired cloud servers from a selection of Dropbox, Evernote, and Google Drive.
 - E-mail: Enter [To/From] E-mail address.
 - Filing: Choose your network folder from a selection of Local or Network. If Network is selected, the available network servers will be displayed at the right box. You may use the Up-arrow or Down-arrow button to scroll from the list.

If **Local** is selected, **USB** and **Public Folder** will be displayed at the right box. If USB is selected, make sure a USB flash drive has been inserted to the USB flash drive port of the product.

If **Public Folder** is selected, the scanned image will be stored in the product's memory. Enter the PIN number (folder name) during scanning and then access the scanned image via the product's embedded web page. (Refer more detailed information on subsequent section - Customizing the Product's Settings via the Embedded Web Page.)

- After your first destination has been specified, press the [Start] (
 button to send the scanned image to the destination.
- **11.** After the scanned image has been delivered successfully to your first destination, the [**Scancast**] window for multiple destinations appears again.

Cloud E-mail Filing

12. Repeat Step 9 to choose your 2nd destination and then press the [**Start**] \Diamond

button to send the scanned image to the destination.

13. Repeat Step 12 ~ Step 13 to send the scanned image to another destination.

(

14. If you have finished distributing your scanned image to all the destinations you want, press the [Back] button to exit the screen.

Using Special Settings

 Load your document in the ADF with the 1st page facing down and the top of the pages pointing to the feeder.



 Press the Scancast Scancast button on the touch screen. The LCD Touch Panel prompts the following Scancast main screen.

		2015/12/04/ 03:31
Basic Advanced Options	Layout Adjustment	
cument Sides	Output Color	
B Name :DOC_#Y#M#D#h#m#s#n	File Format	»»
200dpi >		
	Doptions cument Sides Parale Parale Parale Parale Parale Parale Parale Parale Parale Parale Parale Parale Parale Para	Options Adjustment cument Sides Output Color Image: Down F. Image: Name File Format :DOC_#Y#M#D#h#m#s#n MPDF >

- 3. On the **Basic** screen, enter your desired file name and check if document side, output color, or file format meets your requirements. If not, change the settings to suit your needs.
- 4. Tap the Advanced Settings tab to prompt the Advanced Settings screen. Change the density, contract, resolution, and quality level if the default settings are not satisfactory. (For more information about the scan settings, please refer to the preceding section – Scanning and Sending Your Documents to E-mail Addresses on page 31.)
- 5. Tap the Layout Adjustment tab to prompt the Layout Adjustment screen. Change original size and preview if the default settings are not satisfactory. (For more information about the scan settings, please refer to the preceding section – Scanning and Sending Your Documents to E-mail Addresses on page 33.)
- 6. Tap the Start

☽

button. The scanner starts scanning your document.

7. The product starts scanning and the preview image will be displayed.

•	Amsterdam		Remove
	Contrasting of the contrastin		
71	The set of	Total 1 pages	

- 8. On the Preview screen,
 - Start: If the scanned image is OK, press the [Start] button ∿
 -) on the touch panel to distribute the scanned image.
 - Remove: If the scanned image is not satisfactory, tap the [Remove] button (

) to delete the scanned image.

Insert: You may also insert more pages by taping the [Insert

Insert)] button on the bottom of the screen. Pages (

- Cancel: If the scanned image is not OK, tap the [Cancel] button) to abort the job.
- \bigcirc) button has been selected, the [Scancast] 9. If the [Start] (window for multiple destinations appears.



- 10. Choose a [Cast To] destination for your scanned image. Choice: Cloud, E-mail, Filing.
 - Cloud: Choose your desired cloud servers from a selection of Dropbox, Evernote, and Google Drive.
 - E-mail: Enter [To/From] E-mail address. _
 - Filing: Choose your network folder from a selection of Local or _ Network. If Network is selected, the available network servers will be displayed at the right box. You may use the **Up-arrow** or Down-arrow button to scroll from the list.

If **Local** is selected, **USB** and **Public Folder** will be displayed at the right box. If USB is selected, make sure a USB flash drive has been inserted to the USB flash drive port of the product.

If **Public Folder** is selected, the scanned image will be stored in the product's memory. Enter the PIN number (folder name) during scanning and then access the scanned image via the product's embedded web page. (Refer more detailed information on subsequent section - Customizing the Product's Settings via the Embedded Web Page.)

11. After your first destination has been specified, press the [Start]

 \checkmark) button to send the scanned image to the destination.

12. After the scanned image has been delivered successfully to your first destination, the [**Scancast**] window for multiple destinations appears again.

Scancast				Dec 4, 2015 3:33:14 AM
				5
	Cast To	E-mail	Filing	

13. Repeat Step 10 to choose your 2nd destination and then press the [**Start**]

button to send the scanned image to the destination.

- 14. Repeat Step 12 ~ Step 13 to send the scanned image to another destination.
- **15.** If you have finished distributing your scanned image to all the destinations you want, press the [**Back**] button to exit the screen.

4 Setting Up and Managing Destinations

This section provides procedure for the administrator to setup and manage your destinations including E-mail addresses or network folders to distribute the scanned document on the network.


Setting Up Your E-mail Address Book


This section provides procedure for the administrator on how to setup E-mail Address Book. The address book can be setup and managed either through the LCD Touch Panel or the product's embedded web page. This section uses LCD Touch Panel as an example.

Adding a new E-mail Address

Follow these steps to add a new E-mail address.

 On the Home screen of the LCD Touch Panel, select [Settings]>[Address Book] in succession. The E-mail Address Book screen will be displayed.

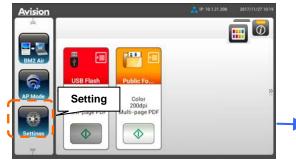

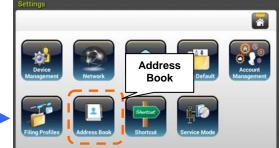

2. Tap [New] to prompt the [New E-mail Address] page.

ettings >> Addre	ess Book	•	2016/08/31/ 16:47
Personal		٩	* * 5
nimo_wei	nimo_wei@ abc.com		

- 3. Enter your E-mail address and its description.
- 4. Tap [Save] to save your address and leave the E-mail screen.

Editing a Current E-mail Address

To modify a current E-mail address,

- 1. Repeat Step 1 from the previous section, *Adding a New E-mail Address*. The [E-mail Address Book] page will be displayed.
- Select the E-mail address which you want to modify from the list and then tap [Edit] to prompt the [Modify E-mail Addresses] page.
- **3.** Modify your address information.
- Tap [Save] to save the setting and leave the E-mail screen. Or tap [Cancel] to leave the page without saving any setting.

Deleting a Current E-mail Address

To delete a current E-mail address,

- 1. Repeat Step 1 from the previous section, *Adding a New E-mail Address*. The [E-mail Address Book] page will be displayed.
- Choose the address you want to delete from the list and then choose
 [Delete] to erase the address. A Confirmation dialog box appears to confirm your deletion. Click [OK] to confirm or [Cancel] to exit.

Adding a new E-mail Group

To send multiple addresses simultaneously at one time, you can create address group to speed up the process. Up to 50 addresses can be included in one group and a total of 50 groups can be created in the Address Book.

To add a new E-mail group,

- 1. Repeat Step 1 from the previous section, *Adding a New E-mail Address*. The [E-mail Address Book] page will be displayed.
- 2. Tap [Group] and then choose [New] to prompt the [Add a New Group] page.
- **3.** Enter your group name and its description.
- 4. Choose the address from the address list and click \rightarrow to add a member to the group.

ettings >> A	Address Book >> Gro	up		2016/11/16/ 09:0
				Cancel Save
Name			Description	
Edit Members				
Contacts List			Group Members	
AV01419	tina_yang@abc.com			
AVOITIS				
AV01420	irene_tseng@abc.co			
		12		0

 Click [Save] to save the setting or [Cancel] to leave the page without saving any setting.

Editing a Current E-mail Group

To modify a current E-mail group,

- 1. Repeat Step 1 from the previous section, *Adding a New E-mail Address*. The [**E-mail Address Book**] page will be displayed.
- 2. Tap [**Group**] and choose the group which you want to modify from the list and then tap [**Modify**] to prompt the [**Modify E-mail Group**] page.
- Modify your group information. Choose the group member you wish to add and then click → to add the new member or click ← to delete an old member from the group.
- 4. Tap [**Save**] to save the setting and leave the E-mail screen. Or tap [**Cancel**] to leave the page without saving any setting.

Deleting a Current E-mail Group

To delete a current E-mail group,

- Repeat Step 1 from the previous section, *Adding a New E-mail Address*. The [E-mail Address Book] page will be displayed.
- 2. Tap [**Group**] and choose the group which you want to delete from the list and then tap [**Delete**] to erase the group.
- 3. A Confirmation dialog box appears to confirm your deletion. Click [**OK**] to confirm or [**Cancel**] to exit.

Setting Up Your Filing Profiles

The section provides procedure on how to setup your Filing Profiles to send your scanned document to a specified network folder. The Filing Profiles can be setup and managed either through the LCD Touch Panel or the product's embedded web page.

Adding a new Filing Profiles

To create a Filing Profiles, follow these steps:

1. On the Home screen of the LCD Touch Panel, select [Settings]>[Filing Profiles] in succession. The Filing Profiles screen will be displayed.



FTP_PC	^
FTP_NB	Ne
Filing_PC	Edi
Filing_NB	4
	Dele
	× –

- 2. Tap [New] to prompt the [New Filing Profiles] page.
- Enter your Filing Profiles information. Refer to the preceding section, *Creating Your Filing Profile (page 19)*, on how to enter your folder information.
- 4. Tap [Save] to save your setting or [Cancel] to leave the screen without saving these settings.

Editing a Current Filing Profiles

To modify a current Filing Profiles,

- 1. Repeat Step 1 from the previous section, *Adding a New Filing Profiles*. The [Filing Profiles] page will be displayed.
- Choose the Filing Profiles which you want to modify from the list and then tap [Modify] to prompt the [Modify Filing Profiles] page.
- 3. Modify your folder information.
- Tap [Save] to save the setting and leave the Filing Profiles screen. Or tap [Cancel] to leave the page without saving any setting.

Deleting a Current Filing Profiles

To delete a current Filing Profiles,

- 1. Repeat Step 1 from the previous section, *Adding a New Filing Profiles*. The [Filing Profiles] page will be displayed.
- Choose the folder you want to delete from the list and then choose [Delete] to erase the folder. A Confirmation dialog box appears to confirm your deletion. Click [OK] to confirm or [Cancel] to exit.

5 Starting a Scan from Your Mobile Device

With a built-in Wi-Fi module, the scanner is converted into a wireless device. When a mobile device is use, the scanned images can be received from the mobile device.

Making Preparation

To connect the scanner to a wireless LAN, prepare the followings:

• An environment in which a wireless LAN is available

When connecting the scanner to a wireless LAN, you may need information for a wireless access point such as an SSID (network name) and a security key (password). For details, contact your Network Administrator or refer to the manual for the wireless access point.




Attention!

Do not place obstacles that block radio waves (e.g. walls or metal plates) or devices that cause radio wave interference (e.g. cordless phones) within 100 mm of the scanner, or near your wireless access point.

MB Application

Download the **MB Application** on your mobile device from an application store such as Google Play.



Connecting to A Wireless Network

Connecting to a Wi-Fi network in an AP (Access Point) Mode

In AP (Access Point) mode, your mobile devices and the scanner are connected wirelessly without an additional AP (Access Point) since the scanner itself works as an AP.



- 1. If you have connected a wired Ethernet cable to the scanner, disconnect the network cable.
- 2. Turn on the Wi-Fi switch on the back of the scanner. The Wi-Fi LED light will be flashing and then turn solidly on.
- On the Home Screen of the LCD Touch Panel, tap [AP Mode]. In a second, the SSID and IP Address will be displayed.

Avision		💦 IP: 10.1.21.208 2017/11/27 10:19	Settings >> Network	
	AP Mode		Wireless AP mode	Exit Apply
BM2 Air	Mode 🔛 🗈		IP address	192.168.43.1
	USB Flash Public Fo		Network SSID	Avision-D6F0F2
AP Mode	Color Color 200dpi Multi-page PDF Multi-page PDF	2	Security	Disabled
Settings				
Settings				

 On your mobile devices, make sure Avision-xxxxxx (xxxxxx indicates the last six digits of the Mac Address) has been selected as your network name (SSID).

Connecting the Scanner to a Wi-Fi Network in a Client Mode

In a Client mode, your mobile devices and scanner are connected wirelessly through an additional AP (Access Point). This mode is also the default wireless mode.




Connecting Your Scanner to an Access Point:

Important:

Note the wired and wireless mode can not work at the same time. To connect the scanner in a wireless network, please first disconnect the Ethernet cable connecting to your scanner.

- 1. If you have connected a wired Ethernet cable to the scanner, disconnect the network cable.
- 2. Make sure the Wi-Fi LED light is flashing. If not, turn on the Wi-Fi switch on the back of the scanner. The Wi-Fi LED light will be flashing.
- On the Home Screen of the LCD Touch Panel, tap [Settings]>[Network].
 Make sure that [Wireless Client] is turned on.



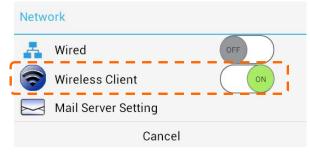

4. In a second, current wireless networks near you will be displayed as shown below.

Wireless	
SMCWBR14S-NL Connected	192.168.2.100 F4885EFBD96C
DSR-500N_WPAPSK Secured with WPA	uth
DSR-500N_1	ati
DSR-500N_WPA2PSK Secured with WPA2	ath
AVISION-206	lto.

5. Select an Access Point and click [Connect] to connect the scanner to a specified Access Point, for example, SMCWBR14S-NL. In a few seconds, if the connection is successful, the IP address and Mac address of the scanner will be displayed as indicated above.

Note:

If your access point is set to not broadcast the SSID, please follow these steps to manually add the SSID name (network name):

 On the wireless page, tap the [More Settings] > button and then choose [Add network]. The [Add network] page will be displayed.

lings >> Network			
Wireless SMCWBR14S-NL	+ Add network	Add network	
Connected	192.165.2.1 (B) WPS Push Button	No	
AVISION-205	attl	Network SSID	
DSR-500N_1	att	Security	
DSR-500N_WPA2PSK Secured with WPA2	alla	None	
edimax-n411 WPS available	at	Show advanced options	
TP-LINK 2.4GHz AC94D9		Cancel	Save

 Enter the Network SSID name and choose the security mode, encryption type, and network key and then tap [Save] to search the wireless network manually.

Your scanner supports the following authentication methods:

Security mode	Encryption method	Key Index
WPAPSK	TKIP, AES, TKIPAES	Х
WPA2PSK	TKIP, AES, TKIPAES	Х

Connecting to a Wireless Access Point Using the WPS Button

You may connect the scanner to a WPS compatible wireless access point by pressing the WPS button on the back of the scanner.

Before You Begin!

To enable the WPS connection of your access point, please refer to the user's guide of your access point.

Perform the following procedure to connect.

 Confirm your wireless access point/router has the WPS or AOSS[™] symbol as shown below.



- 2. Turn on the Wi-Fi switch on the back of the scanner. The Wi-Fi LED light will be flashing.
- 3. Press the WPS button of your wireless access point. (You may refer to the user's guide of your access point/router for instructions on how to use the WPS button.)



 On the wireless page, tap the [More Settings] > button and then choose [WPS Push Button] for at least 2 minutes.

Wireless	
SMCWBR14S-NL Connected	192.168 2.1 💮 WPS Push Button
AVISION-206	() WPS Pin Entry
DSR-500N_1	ati
DSR-500N_WPA2PSK Secured with WPA2	ath
edimax-n411 WPS available	at .

5. If the connection is successful, the Wi-Fi LED light of the scanner will turn solidly on and the connected AP name will be displayed on the page as indicated below.

Wireless	
SMCWBR14S-NL Connected	192.168.2.100 F4885EFBD96C III
DSR-500N_WPAPSK Secured with WPA	all
DSR-500N_1	lto -
DSR-500N_WPA2PSK Secured with WPA2	ath
AVISION-206	att
Buffalo-G-19BA	

Scanning a Document from a Mobile Device

Make sure that the **MB Application** (Scan App) has been installed on your mobile device. The **MB Application** can be purchased for free from an application store such as Google Play.

1. Enable [Wi-Fi] from [Settings] of your wireless computer, smartphone, or tablet and then choose the same network name (SSID) of your scanner. For example, SMCWBR14S-NL.



2. Tap the **MB** app () on the screen to launch the Scan Application. The main window will be displayed and the application will automatically search a scanner in the same wireless LAN. If successful, [**Start scan**] will be displayed at the bottom as shown below.

M XXXX 192.168.1.3 Q	
150 AUTO SIZE Duplex Color	ATTENTION:
	If the scanner is not found, please check the
No files	 followings: 1. The scanner is not ready yet. Tap [More Settings] and then [Search scanner] to search the scanner again. 2. Check if the mobile device and the
Start scan	 Check II the mobile device and the scanner are in the same wireless LAN.

3. Check if the default settings meet your requirements. If not, change the scan settings to fit your specific scanning task.

Item	Description						
200 DPI	Resolution: Select your desired resolution. The higher resolution, the greater the image quality and disk space.						
	Choice: *150, 200, 300 dpi						
AUTO SIZE	Scan Size: Select your paper size or you may choose Auto to let the scanner detect your document size automatically.						
	Choice: *Auto size, A4, LTR (Letter), LGL (Legal), 4x6,						
	5x7						
UPEG	File Format: Select the file format for your image.						
	Choice: *JPEG, PDF, TIFF						
	 Note: The JPEG file does not support the B&W image. The TIFF file format supports only the B&W image. 						
	Select to scan the front side (simplex) or both the front side						
	and the rear side (duplex) of your document.						
	Choice: *Simplex, Duplex						
	Note: The duplex mode is available to scan from the auto						
	document feeder only.						
	Color Mode: Select your desired image mode.						
	Choice: *Color, B&W, Gray						
* Default	settings						

- 4. Load a page to the auto document or place a page on the flat bed.
- 5. Tap the [Start scan] button. (Choose your scanner if there is more than one scanner connected to the network). In a second, the scanner begins scanning the document and the thumbnail scanned image will be displayed.



6. Tap the thumbnail image to view the entire image.

6 Customizing the Product's Configurations

This chapter is specifically targeted to the persons who are responsible for the administration of the product. It is recommended that the administrator read this chapter before installing the machine.

The product's configurations can be customized via the LCD Touch Panel. In addition to using the touch screen, the product allows the administrator to remotely configure the machine by launching the product's embedded web page. How to customize the product's configurations via these two methods will be described in the following sections.



Note:

When installing the product for the first time, it is recommended that the Administrator retain the default system settings. The settings can be customized at a later date once you are familiar with the operation and functionality.

Customizing the Product's Configurations by the Touch Screen

Press the [**Settings**] button on Touch Screen. The [**Settings**] screen will be displayed as indicated.



These 8 buttons displaying at the top are: General, Network, E-mail Default, Filing Default, Filing Profiles, Address Book, ShortCut, and Service Mode. For details on each setting, please refer to the subsequent section, Summary of the Product's Configurations.

Customizing the Product's Configurations by the Product's Web Page

- 1. Open your browser.
- Type the IP address of the product in the URL field of your browser and then press Enter. The product's embedded web page appears.

E-mail Default Host Name: Avision-012345 Pick-up and Separation Roller Count: 1044 Reset Roller Count Filing Default Serial Number: A096691297250002 ADF Simplex Count: 444 Filing Tefault Firmware Version: 0.73 ADF Duplex Count: 600 Address Boek Born Date: 2019/8/8 Multi-Feed Count: 0 Shortcat Jam Count: 0 Jam Count: 0	Model Name: Avision AN360W Reverse Roller Count: 1044 Reset Roller Count Host Name: Avision-012345 Pick-up and Separation Roller Count: 1044 Reset Roller Count Serial Number: A096691297250002 ADF Simplex Count: 444 Firmware Version: 0.73 ADF Duplex Count: 60 Born Date: 2019/8/8 Multi-Feed Count: 0	Menu	Information					
Nrtwerk Model Name: Avision AN360W Reverse Roller Count: 1044 Reset Roller Count E-mail Default Host Name: Avision-012345 Pick-up and Separation Roller Count: 1044 Reset Roller Count Fling Default Serial Number: A09669129725002 ADP Simplex Count: 444 Reset Roller Count Address Boek Born Date: 2019/8/8 Multi-Feed Count: 600 Address Boek 5are Count: 0 Advess Boek Born Date: 2019/8/8 Multi-Feed Count: 0 Jam Count: 0	Host Name: Avision-012345 Pick-up and Separation Roller Count: 1044 Reset Roller Count Serial Number: A096691297250002 ADP Simplex Count: 444 Firmware Version: 0.73 ADP Duplex Count: 600 Born Date: 2019/8/8 Multi-Feed Count: 0 Jam Count: 0		Scanner				_	
E-mail Default Host Name: Avision-912345 Pick-up and Separation Roller Court: 1044 Reset Roller Court Filing Default Serial Number: A096691297250002 ADP Simplex Count: 444 Filing Default 0.73 ADP Duplex Count: 600 Address Bank Born Date: 2019/8/8 Multi-Feed Count: 0 Arcross Masagement Arcess Masagement 0 Arcess Masagement 0	Host Name: Avision-012345 Pick-up and Separation Roller Count: 1044 Reset Roller Count Serial Number: A096591297250002 ADP Simplex Count: 444 Firmware Version: 0.73 ADP Duplex Count: 600 Born Date: 2019/8/8 Multi-Feed Count: 0 Jam Count: 0		Model Name:	Avision AN360W	Reverse Roller Count:	1044	Reset Roller Count	
Filling Dufault Serial Number: A09669129725002 ADF Simplex Count: 444 Filling Prefiles Firmware Version: 0.73 ADF Duplex Count: 600 Address Bank Born Date: 2019/8/8 Multi-Feed Count: 600 Accessal Masagement Jam Count: 0 Jam Count: 0	Serial Number: A09669129725002 ADF Simple Count: 444 Firmware Version: 0.73 ADF Duplex Count: 600 Born Date: 2019/8/8 Multi-Feed Count: 0 Jam Count: 0 Network	E-mail Default	and the second se	Avision-012345	Dieleurs and Constration Dollar County		Reset Rolles Count	
Firmware Version: 0.73 ADF Duplex Count: 600 Address Bleck Born Date: 2019/8/8 Multi-Feed Count: 0 Merceut Jam Count: 0 Jam Count: 0	Firmware Version: 0.73 ADF Duplex Count: 600 Born Date: 2019/8/8 Multi-Feed Count: 0 Jam Count: 0	Filing Default					Neser Nollei Count	
Address Book Born Date: 2019/8/8 Multi-Feed Count: 0 Shortcut Jam Count: 0	Born Date: 2019/8/8 Multi-Feed Count: 0 Jam Count: 0 Network	Filing Profiles						
Account Management	Network	Address Book				0		
		Shortcut			Jam Count:	0		
Firmware Undate		Account Management						
		Firmware Update						
Public Folder Network	Wired	Public Folder	Network					
ImportExport	Wired	Import/Export	10					
IP Address: 10.1.20.171			MAC Address:	000232014085				

 To access complete information of the web page, please login with the default user name and password – [admin]. The password can be changed later in the web page.

					Login
Web.Manager					
Menu	Information				
Information Public Folder	Scanner				
	Model Name:	Avision AN360W	Reverse Roller Count:	1044	
	Host Name:	Avision-012345	Pick-up and Separation Roller	Count: 1044	
	Serial Number:	A096691297250002	ADF Simplex Count:	444	
	Firmware Version:	0.7	Duplex Count:	600	
	Born Date:	201	I-Feed Count:	0	
			Jam Count:	٥	
	Network				
	Wired				
	IP Address:	10.1.20.171			
	MAC Address:	000232014085			

Click each item under these tabs to set up relevant values. For details on each setting, please refer to the subsequent section, Summary of the Product's Configurations.

Summary of the Product's Configurations

Information: Used to show the product's basic information.

Scanner				
Items	Description			
Model Name	Used to show the product's model name.			
Host Name	Used to show the product's host name (Avision-xxxxxx) for			
	the scanner in a wired and wireless environment. Xxxxxx			
	indicates the last six digits of the scanner's Mac address.			
Serial Number	Used to show the product's current time. The time			
	format is 24-hour system.			
Firmware	Used to show the firmware version.			
Version				
Born Date	Used to show the manufacturing date.			
Scan Count	Scan Count including Reverse Roller Count, Pick-up and			
Separation Roller Count, ADF Simplex Count, Multi				
	Count, and Paper Jam Count.			
	Reset Roller Count: Click this button to reset roller			
	count after roller has been replaced.			
Network				
Items	Description			
Wired	Used to show the product's IP and Mac address in a			
	wired network environment.			
Wireless AP	Used to show the IP and Mac address of the product's			
	AP (Access Point) in a wireless network environment.			
AP Mode	Used to show the product's SSID (network name) and			
	IP address in a wireless network environment.			

Device Management

General: Used to specify the product's general information.

General	
Items	Description
Host Name	Avision-xxxxxx: The network name (SSID) for the
	scanner in a wired and wireless environment. Xxxxxx
	indicates the last six digits of the scanner's Mac
	address.
NTP Server	Used to specify the product's NTP server.
Date	Used to specify the product's current date.
Time	Used to specify the product's current time. The time
	format is 24-hour system.
Time Zone	Used to specify the time zone of your location.
Power Saving	Used to specify the length of time the product needs to
	enter the power saving mode after last action. Range: 1
	~ *240 minutes
Keep wired	Check to keep wired network on during the machine's
network on	power saving mode.
during sleeping	
Enable Auto	Check to enable auto power off. Range: *0 ~ 480
Power Off	minutes
Screen Off	Enter the length of time the product turns off the screen
	after the last action.
	Choice: *Never, 3 min, 5 min, 10 min
Device E-mail	Enter device's e-mail address. This address serves as
Address	[Report to E-mail] address in Filing function if you
	wish to send the filing report to an E-mail address.
Multi-Feed	Choose if you wish to enable the Multi-Feed Detection
Detection	via ultrasonic unit. Ultrasonic Detection allows you to
default	set overlapped document by detecting paper thickness
	between documents. Choice: On/*Off
Admin Profile	Used to specify the login name and password to enter
	the product's web page.
	E-mail Address: used to specify the administrator's
	E-mail address.
Function Lock	
Scan to USB	Used to enable or disable the function. Choice: *ON/OFF
A ⁺ Manager Setti	ngs
A ⁺ Manager	Check [Enable] and then enter the IP address of a
Settings	specified server to send the system log file to for quick
	troubleshooting.
* : Factory Default	

Network:	Used t	o specify	the product's	s network	settings.

Items	Description				
Wired					
DHCP	Used to specify if the product's IP address is assigned by DHCP or a static IP. Choice: Off, On If you have a DHCP server available on your network and the DHCP has been enabled, the IP address, subnet mask, gateway, and DNS server will be automatically given.				
	IP AddressThe Internet Protocol (IP) address assigned to your machine by your network administrator.				
	Subnet MaskThe net mask address assigned by your network administrator.				
	Gateway IP	The gateway IP address assigned by your network administrator.			
	DNS Server	The Domain Name Server assigned by your network administrator.			
Mail Server					
Items	Description				
Mail Server	Enter the IP address of your SMTP server (mail server).				
SMTP Port #	Enter the port number of the SMTP server. * 25				
Authentication Method	Choose to enable the email authentication method.				
Method	Choice: OFF, *ON				
Encrypt	Choose the encryption method of your emails to the SMTP server.				
	Choice: *None	, STARTTLAS, SSL/TLS			
Login Name	Enter the login name for SMTP authentication.				
	Enter the login r	name for SMTP authentication.			

LDAP Settings				
Items	Description			
Authentication	Enter the IP address of your LDAP server and its port			
LDAP	number.			
New	Setup a new LDAP setting.			
	Enter IP address and port number of your LDAP server,			
	Login name and password to access the LDAP server,			
	and search information.			
	Note: Check LDAP server information with your			
	Network Administrator.			
Delete	Delete a current LDAP setting.			
Modify	Modify information of a current LDAP setting.			
* : Factory Default				

E-mail Default: Used to specify the product's default scan settings for E-mail. The default scan settings include 5 tabs which are Basic, E-mail Option, Advanced Settings, Layout Adjustment. For more details on the options of each tab, please refer to the setting description on the preceding section, <u>Scanning and Sending</u>. <u>Your Documents to E-mail Addresses</u> on page 30.

Filing Default: Used to specify the product's default scan settings for Filing. The default scan settings include 5 tabs which are Basic, E-mail Option, Advanced Settings, Layout Adjustment. For more details on the options of each tab, please refer to the setting description on the preceding section, <u>Scanning and Sending</u> <u>Your Documents to a Network Folder, a USB Flash drive or a Public Folder</u> on page 35.

Filing Profiles: Used to setup and manage your file destinations including FTP, SMB, USB (an inserted USB flash drive), or a Public Folder (the machine's memory).

Items	Description
Add	 Add a new Filing Profiles. Enter information on the [Basic], [Advanced Settings], [Layout Adjustment] tabs. For more details on the options of each tab, please refer to the setting description on the preceding section, Scanning and Sending Your Documents to a Network Folder, a USB Flash drive or a Public Folder on page 35.
Delete	Delete a current profile.
Modify	Modify a current profile.
Folder Name	Used to specify the folder name for the destination.

Address Book: Used to create or edit your address book. Options include Add, Modify, Delete, and Group.

ShortCut: Used to set up the product's ShortCut displayed on the LCD touch panel.

Item	Description
Destination	Choice: USB Flash, Public Folder, FTP, FTPS, SMB,
	E-mail.
	Option: New, Edit, Delete

Account Management: Used to define users and set user's privileges including using the copy, E-mail, cloud, or filing function of the product by assigning an account's authentication method.

Basic	
Items	Description
Enable Security	Check to implement security by setting up
Management	accounts and enabling LDAP authentication.
Enable Guest Account	Check to allow guest accounts.
Enable LDAP Authentication	Check to enable LDAP authentication.
Default Enable Function	Check the names of functions (ShortCut, Cloud,
	E-mail, Filing, BM2 Air, AP Mode, Scancast) to
	be allowed to perform.
Account List	
Items	Description
New	Setup a new account.
	Enter User Name, Password, E-mail Address,
	check the functions to be allowed to perform,
	and check if using LDAP authentication.
Delete	Delete a current account.
Modify	Modify information of a current account.

Firmware Update: Obtain the latest firmware file from the web site (www.avision.com) first. And then click [**Browse**] to find the file on your computer. Finally click [**Update**] to update the latest firmware to the product.

Configurations Customized Only Via the LCD Touch Screen

There are some activities which can be set only through the LCD touch screen, for example, the service mode. The service mode is set to provide saving system log file, updating firmware for quick troubleshooting your problems.

Accessing the Service Mode

To access the service mode,

- 1. On the product's LCD screen, choose [Settings] and then [Service Mode].
- 2. The Service Mode screen will be displayed with following options: [FW

Updated], [Reset to Default], [Run-in Test], and [Save Log].

FW Updated:	Follow these steps to update the firmware:		
	 Locate the latest firmware file from the web site (http://www.avision.com). 		
	2. Store the firmware file on your removable USB disk.		
	3. Plug the removable USB disk into the USB disk port of the machine.		
	 Tap [FW Updated] to update the firmware file. 		
Reset to Default:	Choices include [Reset Admin], [Reset Network Settings], [Reset Admin and Network], [Reset to Factory Default].		
	Reset Admin: Reset the login user name and password of the product's web page.		
	Reset Network Settings: Reset the network settings to factory default.		
	Reset Admin and Network: Reset both the login information and the network settings to default.		
	Reset to Factory Default: Reset all configurations to factory default values.		
Run-in Test:	For internal use only.		
Save Log:	Plug a removable USB disk into the USB port of the machine and tap [Save Log] to save system log file.		

Adjusting Brightness

To adjust brightness on the LCD screen, follow these steps:

- On the product's LCD screen, choose [Settings] and then [Device Management].
- 2. Tap the [**Brightness**] option and move the scroll bar to the right to increase your brightness or to the left to decrease your brightness of the LCD screen.

Selecting Language

To select the language, follow these steps:

- On the product's LCD screen, choose [Settings] and then [Device Management].
- Tap the [Language] option and select your language display on the LCD screen. Choice: English, Chinese Traditional, Chinese Simplified, Spanish, Portuguese, and Hebrew.
- 3. Tape [**Save**] to save the settings.

There are some activities which can be set only through the product's web page. For example, some options on [**Device Management**], [**Import/Export**], and [**Public Folder**]. How to use these options will be described in the following sections.

Exporting and Importing System Data

To easily manage several AN360W in the network, the machine provides a useful feature to allow system administrator to export the system data of one AN360W into a file and then import this data to other AN360W in the network.

For example, the address book, Filing Profiles, and default systems settings of one AN360W can be first exported to a file as a backup and then import these files to other AN360W.

Follow the procedure described in below to export and then import your system data.

To export system data,

- 1. On the product's web page, choose [Import/Export].
- 2. Choose the system data you want to export. Choice: Address Book, Filing Profiles, Settings (Device Management, Account Management, Mail Server/LDAP Server, E-mail Default, Filing Default).
- Choose [Export Now]. The selected system data will be exported into a file. If [address book] is selected, an AN360W_addressbook.csv file will be generated. If [Filing Profiles] or [settings] is selected, an AN360W_profile.json or AN360W_setting will be generated...
- 4. Save the exported file into your computer as a backup.

To import system data,

- 1. On the product's web page, choose [Import/Export].
- 2. Choose the system data you want to import. Choice: Address Book, Filing Profiles, Settings (Device Management, Account Management, Mail Server/LDAP Server, E-mail Default, Filing Default).
- 3. On the Importing option, choose [**Browse**] to locate the system data which you have been previously exported.
- 4. Choose [Import Now] to start importing the system data to your machine. The current system data will be overwritten.

Accessing the Public Folder

The machine allows you to save the scanned image temporarily to the product's memory and then access the scanned image through the product's web page. To access the scanned image, follow these steps:

To access the scanned image,

- 1. On the product's web page, choose [Public Folder].
- 2. A Pin number dialog box appears. If desired, enter your pin number to access the public folder.
- 3. Choose your scanned file on the [**Public Folder**] and click [**Download**] to download the file to your computer.

Note: The scanned images can be saved on the product's memory for 24 hours only. After 24 hours, the image files will be automatically deleted.

7 Using the Product as a Regular Scanner

Installing the Scanner Driver

NOTE:

1). To ensure your computer can identify the USB scanner, please install scanner driver first before connecting the scanner to your computer.

2). The scanner driver contains TWAIN, and WIA driver. After the installation of scanner driver is completed, this scanner allows you to scan via a TWAIN, or a WIA interface. Start your TWAIN-compliant image editing software application to select a TWAIN or WIA user interface. You may also launch Microsoft's Scanner and Camera Wizard to scan via a WIA user interface.

- 1. Place the supplied CD-ROM onto your CD-ROM drive.
- 2. The software installation graphic appears. If not, run "setup.exe".

Avision of your office	www.avision.com
To ensure Button Manager V2 work properly driver before installing the Button Manager	
Install Scanner Driver	
Install Button Manager	
Install Virtual Scanner Link	
Install AVScan X	
View Manuals	
	Exit

Contents on the installation graphic:

- **Install Scanner Driver:** To communicate with your scanner, you need to install the scanner driver.
- **Install Button Manager V2**: To use the [BM2 Air] function, you need to install Button Manager V2. To ensure Button Manager V2 works properly, please FIRST install scanner driver before installing Button Manager V2.
- **Install Virtual Scanner Link**: To connect your computer to the scanner in the network, you need to install the Network Setup Tool.
- **Install AVScan X:** To scan and organize your multi-page document(s), you can install the software application to manage them easily and effectively.


- **View Manual:** Click **"View Manual"** to view or print the detailed user manual for the scanner and Button Manager V2 respectively.
- Click Install Scanner Driver to install the scanner driver and then click Install Button Manager V2 to install the Button Manager V2 unto your computer.

Connecting to the Computer

Via a USB Cable

1. Connect the **square end** of the USB cable to the USB port of your scanner. Connect the **rectangle end** to the USB port at the rear side of your computer.


Note: The scanner is designed with a USB 3.1 interface to ensure the optimal speed. If your computer comes with a USB 3.1 port, make sure to connect the scanner to your computer to the USB 3.1 port which is distinguished in blue color at the back of your computer. The USB 3.1 port enhances your scanning speed and is also compatible with USB 2.0 and USB 1.1.

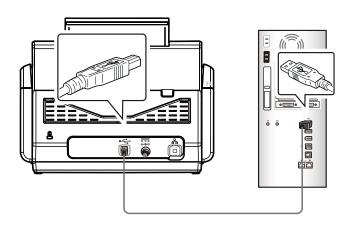

- 2. The computer should detect a new USB device and prompt a "New Hardware Found" message.
- **3.** By following the on-screen instructions, click the **Next** button to continue. When the certification screen appears, click **Continue Anyway** to complete the installation.
- 4. When the **Finish** dialog is prompted, click the **Finish** button.

Via a Wired Network

- 1. Connect one end of your Ethernet LAN cable to an available port of your Ethernet Hub.
- **2.** Connect the other end to the port marked $\mathbf{\overline{\Delta}}$ at the back of the product.

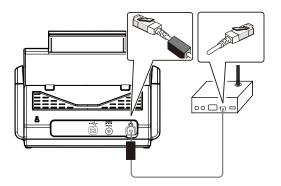


Connecting to the Network Scanner

Before connecting to the network scanner, make sure that Virtual Scanner Link (Network Setup Tool) has been installed onto your computer. The Network Setup Tool is included in the supplied software CD.

 Start [Virtual Scanner Link] by choosing Start>All Programs>Avision Virtual Scanner>Virtual Scanner Link. The main window will be displayed and the scanners in your network will be searched automatically. In a few seconds, the result including the scanner model and scanner's IP address will be displayed as shown.

rtuar Oc	anner Link		Refresh	Setting
vition	ANxxxx	Avision-7E5C	2C18AE657E5C	10.1.23.22

2. Choose the scanner you wish to connect and then press [Connect]. If connection is successful, a connection mark will be displayed as shown.

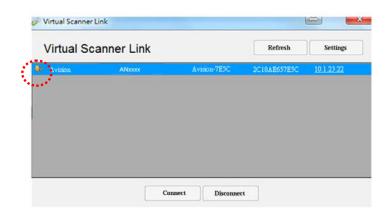

3. After the scanner has been connected successfully, launch your TWAIN-compliant image-editing software application to start a scan.

Note:

- The network scanner can be used by one user at a time. If the network scanner is being used by other user, you will be prompted with a message to connect the scanner later. When the scanner is available, you will also be prompted with a message to connect the scanner and start scanning your document.
- If the network scanner has not been found, it is probably the scanner and your computer are not in the same LAN. In this case, you can assign a specific IP address of the scanner to let [Virtual Scanner Link] automatically search the scanner. Click the [Option] button, type your IP address on the [Searching Address] field (1), then click the [+] button (2) and finally click [OK] (3) to complete.

Options			-	X
Settings		Language:	English -]
About		Searching Time:	5	(5~20 sec.)
	(1)	Searching Address:	10 . 1 . 23 . 47	+ (2)
		(3)	OK Cancel	

- Searching Time: When the program is launched, it automatically searches the scanner in the network in 5 seconds (default). The searching time can be changed from a range of 5 to 20 seconds.
- If the [Virtual Scanner Link] program has been closed and then launched again, [Virtual Scanner Link] will automatically search and connect the network scanner it has previously connected to.

Verifying Your Scanner Installation

To verify if your scanner installation is correct, Avision provides you a useful test program called Avision Capture Tool. With this tool, you can perform simple scans and view the captured images. In addition, it helps you complete your scan at a rated speed.

The following procedure describes how to verify your scanner installation. If the installation is not correct, please review the preceding section to check if the cable connection and scanner driver have been successfully installed.

Before you begin, be sure the scanner is on.

1. Select Start>Programs>Avision xxx Scanner>Avision Capture Tool. The Select Scanner Model dialog box will be displayed.

Driver Type:	
TWAIN	
Scanner Model:	
Avision xxxx	^
	OK
	Cancel

2. Select your driver type and scanner model and click OK. The following Avision Capture Tool dialog box will be displayed.

					Fit Page	Actual Size
C Avision Capture Tool	(TWAIN) - xxxx					
🕅 Setup 🎺 Scan	File Format:	BMP	C:\My Scan\Image]
Setup Scan	Save	File	e Format	 File	Path	

- 3. Choose your desired file format from the File Format drop down list box. (Default is JPEG, other choice includes TIFF, MTIFF, PDF, MPDF, GIF, and BMP.) The supported file formats vary depending on your scanner model.
- 4. Type your desired folder name and file name in the File Path box. (Default is C:\Documents and Settings\User Name\My Documents\My Scan\Image.)

Note: If you do not wish to save the scanned image, deselect the Save button since default is Save Enable. In this case, the thumbnail view will be disabled. And therefore, after viewing all the scanned images, only the last one will remain on the screen.

5. Click the Setup button () or choose Setup from the File menu to prompt the Scanner Properties dialog box.


	r Properties Paper Setting Information			E
Image Selection Box	nt Auto Color Detection nt Color nt Color nt Gray nt BBW ar Auto Color Detection ar Color ar Gray ar BBW	Binarization: Senativity: Brightness Contrast: Resolution (dpl): Invert:	Dynamic Threahold	* *
	e settings for both sides Scan Source: Profiles	Auto Document Feeder Custom	•	Cancel

- 6. From the Image Selection Box, choose your desired image type for your scanned image. (Default is Front B&W) If you have a duplex scanner, choose Front and Rear to scan both sides of your document.
- 7. Click OK to quit the Scanner Properties dialog box. (To learn more details about the Scanner Properties dialog box, please see the subsequent chapter, *Using the Scanner Properties Dialog Box*.)
- 8. Place your document face down on the document glass or face up in the auto document feeder.
- 9. In the Scan Validation dialog box, click the Scan button (
- 10. The document will be scanned and displayed in the Scan Validation screen. After the scanned images have been displayed, your scanner installation verification is completed.

Your Alant Story of Sam	Ra Road JPEC 😴 CVMy Scardinage	00	_
	It is not only of addition for interve space. The for data is an interview of a structure of the structure space o		

- 11. You can view the scanned image in Fit Page () or Actual Size (100%) button () from the Viewing toolbars at the right side.
- Click the Close box or Quit from the File menu to exit the Scan Validation Tool.

A Glance of the Scanner Properties Dialog Box

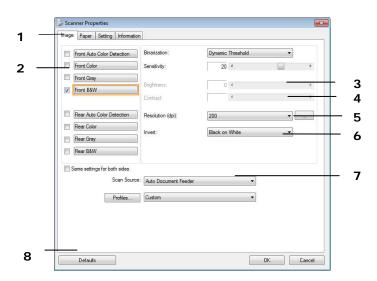

1. Tab Options	Choice: Image, Compression, Color Dropout, Paper, Multi-Feed Detection, Preview, Options, Settings, Information.
2. Image Selection Box	Choose your image type and the side of document you wish to scan. Options vary based on type of scanner.
3. Brightness	Adjust the brightness level from -100 to +100.
4. Contrast	Adjust the contrast level from -100 to +100.
5. Resolution	Determine the quality of the scanned image. The industry standard is 200 dpi.
6. Invert	Reverse the color of your scanned image.
7. Scan Source	Choice: Auto Document Feeder, Flatbed, Flatbed (Book), Automatic (varies due to different scanner model)
8. Defaults	Reset all values on the tabs to the factory default settings.

8 Using the Scanner Properties Dialog Box

The Scanner Properties dialog box allows you to configure the scanner's settings. It consists of several tabbed windows each of which will be described in this chapter.

Note: In this chapter, all options are available based on a duplex (double-side) scanner. If you have purchased a simplex (single-side) scanner, all options are available for single sided only.

Front Auto Color Detection	Binarization:	Dynamic	Threshold	-	
Front Color	Sensitivity:	20	•		•
Front Gray]				
Front B&W	Brightness:	0	*		F
201	Contrast:		*		۲
Rear Auto Color Detection	Resolution (dpi):	200		•	
Rear Color	Invert:	Black on	105.0		
Rear Gray) Invert:	black on	white	•	
Rear B&W	1				
Rear B&W	1				
Same settings for both sides	e: Auto Document Feede	r	•		
Same settings for both sides	e: Auto Document Feede	f	•		
Same settings for both sides Scan Sourc		f			

The Scanner Properties dialog box

	Binarization:	Dynamic	Threshold	•	
Front Color	Sensitivity:	20	•		۲
Front Gray					٢
Front B&W	Brightness:		4		
	Contrast:		*		۲
Rear Auto Color Detectio	Resolution (dpi):	200		•	
Rear Color	Invert:	Black on	Mate	•	
Rear Gray	arven.	DIACK OIL	AALING	•	
Rear B&W					
Same settings for both side Scan S	es Source: Auto Document Feede	a	•		
Profiles	s Custom		•		

The buttons on the Scanner Properties dialog box

Buttons	Description
Defaults	Click the Defaults button, the factory default settings will
	be shown on each tab.
Cancel	Click the Cancel button to leave the Scanner Properties dialog box.

The following table shows the default settings :

Tab name	Default settings
Image	Image : Front B&W Binarization : Dynamic Threshold Resolution : 200 dpi Invert : Blank on White Scan Source : Auto Document Feeder Threshold : None Brightness : None Contrast : None
Compression	None
Color Dropout	None
Paper	Cropping : Automatic Deskew : Yes Orientation : Portrait OverScan : 0.00 Note: The availability of this option varies due to scanner model. Unit : Inch
Multi-Feed Detection	None
Preview	None
Options	Rotation Degrees : None Blank Page Removal : None Edge Fill : White , 0 mm Image Control Option : None
Setting	Enable Energy Saver : Enable, 15 minutes after last scan action Show Scanning Progress : Yes Show Warning Message : Yes Save Settings after Closing : Yes
Imprinter	Digital Imprinter

Showing or Hiding Tabs

The [Scanner Properties] dialog box is displayed in default with three basic tabs - Image, Paper, and Information. To show more tabs, click the [Scanner Properties] icon to access more scan settings.

To show more tabs,

- Click the [Scanner Properties] icon () on the upper left corner, and choose [Tab] to show available tab names. The available tabs include Compression, Color Drop out, Preview, Rotation, Separation, Multi-Feed, Options, Settings, and Imprinter. (Note: the options vary based on scanner model.)
- 2. Choose the tab you want to display. The selected tab will be shown with a check mark and then displayed in the [Scanner Properties] dialog box.
- 3. To access the settings, click the selected tab on the top of the [**Scanner Properties**] dialog box. The page of the selected tab will be displayed.

To hide a tab window,

- 1. Click the [Scanner Properties] icon () on the upper left corner, and choose [Tabs] to show available tab names.
- 2. Choose the tab you want to hide. Then, the selected tab will be hided in the [Scanner Properties] dialog box.

Note: The [Image], [Paper], and [Information] tab can not be hided since they preprogrammed to be displayed by default.

Tabs 🕨	Compression Color Dropout				
Move Close Alt+F4	Multi-Feed Detection	ynamic	Threshold	•	
Front Color	Preview Rotation	20	•		۲
Front Gray	Separation		4		F
Front B&W	Enhancement				Þ
Rear Auto Color Detec	Setting Imprinter				
Rear Auto Color Detec	···	00,100		▼][
Rear Gray	Invert:	Black on	White	•]	
Rear B&W					
Same settings for both si	des n Source: Auto Document Feeder	,	•		
Scar			•		
Scar	a Source: Auto Document Feeder		•		
Scar	a Source: Auto Document Feeder		•		
Scar	a Source: Auto Document Feeder				
Scar	a Source: Auto Document Feeder		•		

The Image tab allows you to choose the front side and (or) the rear side of your document, the type of image, and to set several basic scan settings. Note that except for the resolution, you can set individual scan settings for the front side and the rear side. For example, all settings in the Image tab, Compression tab, Color Dropout tab can be set individually for the front and the rear side. However, the settings in the Paper tab, the Option tab, and the Setting tab have to be set the same for the front and rear side.

Front Auto Color Detection	Binarization:	Dynamic	Threshold	•	
Front Color	Sensitivity:	20	4		•
Front Gray]				
Front B&W	Brightness:	0	4		۲
	Contrast:		*		۲
Rear Auto Color Detection	Resolution (dpi):	200		•	
Rear Color]	Black on	14.0		
Rear Gray	Invert:	Black on	vvnite	•	
Rear B&W	j				
Rear B&W	e: Auto Document Feede	if.	•		
Rear B&W Same settings for both sides Scan Source	e: (Auto Document Feede	ſ	•		
Rear B&W		if			
Rear B&W Same settings for both sides Scan Source		f			
Rear B&W Same settings for both sides Scan Source		r			


The Image tab dialog box

The Image Selection Box

	Front Auto Color Detection
✓	Front Color
	Front Gray
	Front B&W
	Rear Auto Color Detection
	Rear Auto Color Detection
•	
	Rear Color

The Image Selection box includes the image type and document side option. If you wish to scan both the front side and the rear side of your color document, you can check both Front Color and Rear Color at the same time. Note the options vary based on type of scanner.

Example 1 : Scanning a two-sided color document, both sides in color

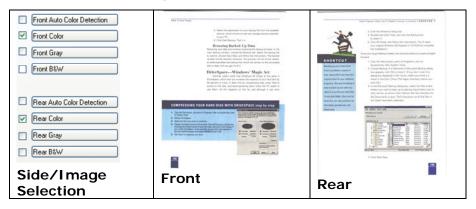

Example 2 : Scanning a two-sided color document, one in B&W, the other in color

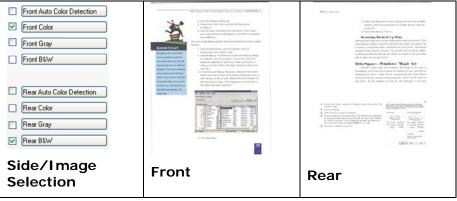


Image Type	Description
Color	Choose Color if you wish to scan a color image for your original in color.
Gray	Choose Gray image if your original contains actual shades of gray.
B&W	Choose B&W if your original contains only text, pencil or ink sketch.



Front/Rear Auto Color Detection:

Click to automatically detect and scan the front or the rear page of your color document in color image mode. If your document is in colors, the scanner will automatically scan the document into a color image. If your document is non-color, you can choose the output to be either B&W or Gray from the Non-Color Selection option. This option is useful when you have a mixture of color and non-color document.

Note: If you choose Front Rear Auto Color Detection, you can not specify the image mode of your rear page and vice versas.


Modes of Auto Color Detection:

If [Front/Rear Auto Color Detection] is selected, its modes will be displayed. Choice includes Normal, Ignore paper color. For paper with background color such as invoices, choosing [Ignore paper color] will automatically remove the background color and enhance the detection accuracy.


INVOICE	INVOICE
(6Nie 638-323-63 Bade : July 26, 2002	683in 030-123-43 Date: July 38, 2002
INVOICE of 55th Space Parts for Automotive South	INVOICE of 51ab Spare Parts for Automotive Seals
For account and sink of Merces. ABC Manufacturing Co., Ltd.	Fer scount and task of Moores. AFC Manufacturing Co., Ltl.
3236 Illiett Auenue , Sealle , WR 94441 U.S.A. 3d : 253-923-6699 est 2336 Fax : 253-922-6688	3236 Hillett Asense , Sentile , Wit 90002 U.S.A. Tel : 253-922-6699 est 2336 Eux : 253-922-6600
Alls. Mr. Besil Wang	Ath: Mr. Desil Worg
Shippel by SST Tudashopius Inc. In: U-Lina Express	Shipped by SST Tudandegies Inc. In: U Line Express
Sailing on or about 3 day 30, 2002 Items Takeus, R. D.C. to U.S.A.	Salling on or about July 26, 2002 Itoms Tabous, R.O.C. in U.S.A.
L/C No. Contract No. A3233	L/C No. Contract No. A1233
Mails & Nos. Description of Goods Quantity Unit Drive Assessed	Marke & Nee. Beergiption of Goods Oversity Unit Itics Assessed
August (Inca He 200) 1 cel: 00720200 00740200 August (Inca He 201) 1 cel: 00720200 00740200	Amout (hen No. 500) 3 eeu 002500.00 002560.00
Demand / June Ma 1993	ADC Junest [has No. 301] 3 cel (002000) 0020000 Junest [has No. 302] 3 cel (002000) 0020000
Settle P/O36_A2233	faulta p/036.4233
CNo.1 Made in Jamm	Citie 1 Made in Dates
ROC.	ROC.
344d 5 sets US3828 44	Total Foods USB02000
Sougle of Sh Consumtial Nature Nata Int Channes Pagesen Bale Consump of Balging Armony, B. F	Sangle et Sir Connected Vales Valet For Connect Papers Mely Connect & Balge XVII : Normannel :
rmal	Ignore paper color

Sensitivity of Auto Color Detection

If your documents contain primarily B&W text and small amount of light or pale colors and you do not wish them to be recognized as color image to save the file size, you can increase the sensitivity value by moving the bar to the right to let these images to be detected as B&W. The value ranges from 1 to 100. The default is 37.

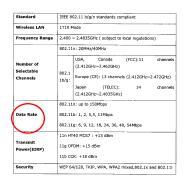

Original

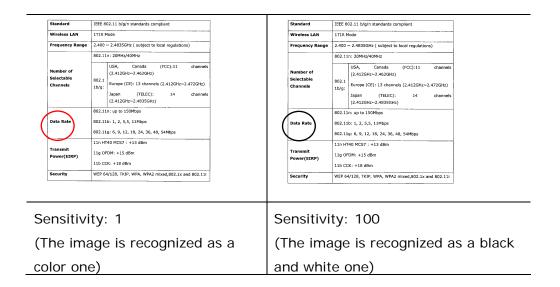

Same settings on both sides:

Click to apply same scan settings for both sides of your documents. After checking this option, any settings you have changed will automatically applied to both the front side and the rear side. For example, if you choose your ideal resolution to be 300 dpi, this will be applied both to the front side and rear side of your document.

Other Image Options

Binarization This is the process of converting a grayscale or color image to a bi-tonal image. There are several different methods of performing this conversion. Options: Dynamic Threshold, Fixed Processing, Halftone 1~5, Error Diffusion.

Dynamic Threshold: Selecting **Dynamic Threshold** allows the scanner to dynamically evaluate each document to determine the optimal threshold value to produce the highest quality image. This is used to scan mixed document containing faint text, shaded background, or color background with a single setting. If Dynamic Threshold is selected, Threshold, Brightness, and Contrast are not available.

Dynamic Threshold (AD): Selecting Dynamic Threshold(AD) to perform the enhanced mode of the DynamicThreshold feature. However, using this mode may slow down your scanning speed.

Sensitivity of Dynamic Threshold


Occasionally your scanned image may contain small dots or speckles. To remove these spots, increase the sensitivity value by moving the bar to the right. The value ranges from 1 to 30. The default is 20.

Fixed Processing: Used for black-and-white and other high contrast documents. A single level is set to determine the black-and-white transition. The threshold is programmable over the entire density range. **Fixed Processing** sets Contrast to 0. If **Fixed Processing** is selected, Contrast is not available.

Halftone: In addition to the black and white display, Halftone can present a somehow gray shade of image by using different size of dots. Halftone image looks like the picture we have seen in the newspaper. Options include Halftone 1, Halftone 2, Halftone 3, Halftone 4, Halftone 5.


Error Diffusion: Error Diffusion is a type of Halftone. Error Diffusion gives good image texture and makes text in images more readable than Halftone.







Error Diffusion Image

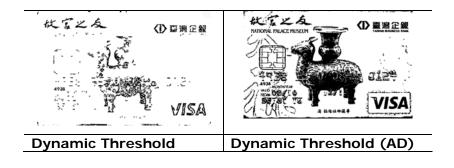

Threshold Used to convert a grayscale image to a

bi-tonal image. The value ranges from 0 to 255. A low threshold value produces a lighter image, and can be used to subdue backgrounds and subtle, unneeded information. A high threshold value produces a darker image, and can be used to help pick up faint images.

Adjust the threshold setting by dragging the Threshold sliding bar to the left or right to achieve the desired threshold setting.





200 dpi, Threshold:50, Brightness: 0

200 dpi, Threshold:100, Brightness: 0

Gray

Document Type: Choice: Normal, Photo, Document

Three options of document type are provided when you choose Gray as the image

type for your scanned document. Choice: Normal, Photo, Document.

- **Document:** Choose Document if your original contains pure text or a mixture of text and graphic since it is an optimal setting for regular business document. When using Document, only Threshold can be adjusted.
- **Photo:** Choose Photo if your original contains photo to reproduce your photo in vivid grayscale image. When using Photo, no Threshold and Contrast can be adjusted.
- **Normal:** When using **Normal**, Threshold, Brightness, and Contrast can be adjusted.

Threshold: The value ranges from 0 to 255. The default is 230. A low threshold value produces a lighter image, and can be used to subdue backgrounds and subtle, unneeded information. A high threshold value produces a darker image, and can be used to help pick up faint images. Adjust the threshold setting by dragging the **Threshold** sliding bar to the left or right to achieve the desired threshold setting.



Normal



Ministration of the second second

Document (Threshold: 230)



Normal




Photo

Photo



Document (Threshold: 230)

- **Brightness** Adjusts the lightness or darkness of an image. The higher the value, the brighter the image. Drag the slider to the right or left to increase or decrease the brightness. The range is from –100 to +100.
- Contrast Adjusts the range between the darkest and the lightest shades in the image. The higher the contrast, the bigger the different grayscale. Drag the slider to the right or left to increase or decrease the contrast. The range is from -100 to +100.

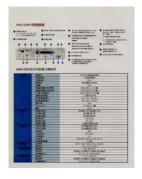


Brightness: -50



Contrast: -50

Brightness: 0 (Normal)

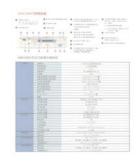

Brightness: +50

		· representation
		· · · · · · · · · · · · · · · · · · ·
1.1.1		and a set of the set o
100		Anness Anness
1244	10 10 mm / 1 dd	•
		· · · · · · · · · · · · · · · · · · ·
		· ··········
AND CODE IT	STREAMER .	
-		Accessed.
		324564
	and a	N. MARCIN M.
		101010-002
		18110-18
		11.15.5 28
	- Harrison	and in what w
	1.010	ALACKA
		CALLED A.
	100.00	CONTRACTOR .
	0217	
	all and a	
	and the second s	Trend () () () () () () () () () (
-	ALC: NO.	Annual Contraction of the Annual Contraction
-	ite and	Terret Science (Construction) Terret Statistics (Construction) Terret St
-	ALC: NO.	Annual Contraction of the Annual Contraction

Contrast: 0 (Normal)

- 8	LILL	Construction C
	ACCORDANS.	ALL POST
		10/10/04/04
- 1	annes.	
	2001 C.	##
- 1	100	ALMAN LAIM
- 1		1000-000
	Internet internet	Adventury and
	Townships	10.000 h 800
	Taxa and the second sec	and the second s
	2004A	
	and the	116. 3 9.41.7
	104.44	1010.0
	ALC: NOT	1.1.1.1
	B. MTOT	10.00
		-Includes
- 1	a are	25.54
	LOWER	A real real real real real real real real
	ALCONT.	Property Proves and An Pr
	ALCONOM	
	- 222	Annual Sector State Annual Sector State Sector State Sector Secto
	ALC: NOT	
-	ALL	NAME AND ADDRESS OF
	ALLER ALLER LERETA	NAME AND ADDRESS OF
	ALLE ALLE JERESI MARK	NACE AND CONCERNE.
	ALLER ALLER LERETA	NAME AND ADDRESS ADDRESS.

Contrast: +50

Resolution A good control of the resolution results a good detail of an image that scans. The resolution is measured by dots per inch (dpi). Normally, the greater the dpi number, the higher the resolution and the image file size. Be aware that greater resolution takes more time to scan, and more disk space for the scanning image. For your information, an A4 size color image scanned at 300 dpi at True Color mode consumes approximately 25 MB of disk space. A higher resolution (usually means over 600 dpi) is only recommended when you need to scan a small area at True Color mode.

Choose a resolution value from the drop down list. The default value is 200 dpi. Available resolutions are 75, 100, 150, 200,300, 400 and 600. Or you may choose your desired value by clicking the box in the right side of the drop down list and press the arrow key to select your desired value and then click the Add button to include it in the drop down list. **Note:** The resolution is up to 300 dpi if an imprinter or a MICR reader is installed or connected to the scanner.



Resolution: 75 dpi




Resolution: 150 dpi

Invert Reverses the brightness and the colors in the image. The default setting is Black on a White background. Reverse mode is White on a Black background. For color images, each pixel will be changed into its complementary color at the command of Invert.

"I am not worthy to have you enter my

» that is God, I beg all my brothers — those w e who work manually, clerics and lay brothers ards being humble in all things; not to glorify r to become interiorly proud because of good w sometimes says or does in them or through the source of the says of the source of the says ord: : 10:20) Let us be firmly convinced of the fact

Black on White

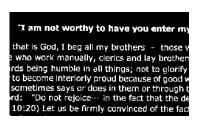

White on Black

Scan Choice:

Source

- Auto Document Feeder: Used to scan multiple pages.
 - Flatbed: Used to scan a single page. For example, pages from newspaper clipping, paper with wrinkles or curls.
 - Flatbed (book): Used to scan several inside pages from book.
 - Automatic: Allow the scanner automatically set its scan If Automatic is selected and there is document in source. both the auto document feeder (ADF) and the flatbed, then the scan source will be automatically set to ADF. If Automatic is selected and there is document only in flatbed, then the scan source will be set to flatbed.

Merge Two Sides into One Image:

If you have a sheet-fed duplex scanner with front input tray, you can scan an A3 size document with an innovative method. Thus, fold your A3 size document into A4, and then load the paper in the front tray. Choose Merge Two Sides from the Scan Source option and then the scanner is able to scan both sides of your document and merge two A4 images into one A3 image.

When you select Merge Two Sides into One Image, the Cropping

or Multi-feed function will be disabled.

Note: This feature must be used with a carrier sheet. Regarding

how to load a document with a Carrier Sheet, refer to Section

4.6.2, Other Paper Selection.

Note the options vary based on type of scanner.

If "Merge Two Sides into One Image" is selected, its choice will be available including "Merge Horizontally", "Merge Vertically", "Merge Vertically (Back Side Flip)". If the reverse side of your document is upside down, choose "Merge Vertically (Back Side Flip)" and the back side will be automatically rotated 180 degrees and merged.

Front		
Side		
Rear Side	Front Side	Rear Side

Merge Vertically Me

colors of the image.

Merge Horizontally

Note the options vary based on type of scanner.

ColorThe purpose of Color Matching is getting the accurate color. ThisMatchingoption uses the default parameters (ICC profile) to adjust the

Choice: None, Document, Photo

- None: Choose "None" to disable this option.
- **Document:** Choose "Document" if your original contains pure text or a mixture of text and graphic since it is an optimal setting for regular business document.
- **Photo:** Choose "Photo" if your original contains photo to reproduce your photo in vivid color image.



Normal



After Color Matching

Scanning Color Images

The following options are available for scanning color images.

- Brightness
- Contrast
- Resolution
- Invert

Scanning Grayscale Images

The following options are available for scanning gray images.

- Brightness
- Contrast
- Resolution
- Invert

Scanning B&W Images

The following options are available for scanning B&W images.

- Binarization (Dynamic Threshold)
- Resolution
- Invert

Or

- Binarization (Fix Processing)
- Threshold
- Brightness
- Resolution
- Invert

Editing Profiles

The Scanner Properties dialog box allows you to change and save your frequently used scan settings into a profile. You can edit these profiles by renaming or deleting them.

To add a new profile,

- 1. Customize your settings. (For example, change your resolution, image type, cropping method, scan size, or other scan settings.)
- 2. Click the Image tab and then choose "Profiles" to prompt the "Edit Your Profile" dialog box.

Scanner Properties						
NP Paper Setting Information	60					
Frank Auto Color Detection	Brataton	Oysamic Threshold	•			
Front Color	Senativity	20 +	- · ·			
Point Gray	2 Stationer	3.9	Edit Your Profile			
Front BAW	Contail					
Peer Auto Color Detection	Peakton (b)	200	Profile:	Duplex, BM/w/, 200 dpi	Add	Delete
Fear Calor	1 1000001900	0		a object a section of		
/Rear Gray	ivet:	Black on White			Rename	Reset
Pear bill	5					
	-					
Sene settings for both adea	Auto Document Freide					
		•				Exit
Polies	Caton	•				
			Contraction of Contra			
Details			OK. Carcel			

3. Click "Add" to enter the name of the profile and then choose "Save".

Add A New Profile		×
Please enter the nar	ne of the profile:	
1		
	Save	Cancel

4. The new profile will be saved and shown in the "Profiles" dropdown list box.

To load a profile,


1. From the Image tab dialog box, choose your favorable profile from the "Profiles" dropdown list box.

Profile:	Duplex, B&&W, 200 dpi	- Add	Delete
	Duplex, B&AV/, 200 dpi Duplex, Color, 200 dpi Duplex, Gray, 200 dpi Simplex, B&AV/, 200 dpi Simplex, Color, 200 dpi Simplex, Gray, 200 dpi	Rename	Reset

2. Your favorable profile will be immediately loaded and displayed on Scanner Properties dialog box.

To delete a profile,

1. From the Image tab dialog box, click "Profiles" to prompt the Edit Your Profile dialog box.



- 2. Choose the profile you want to delete from the dropdown list box.
- 3. Click "Delete". A Confirm message "Are you sure you want to delete this profile?" is prompted.
- 4. Choose "Yes" to delete or "Cancel" to quit.

To rename a profile,

1. From the Image tab dialog box, click "Profiles" to prompt the Edit Your Profile dialog box.

rofile:	Betsy	Add	Delete
	Betsy Duplex, B&&W, 200 dpi Duplex, Color, 200 dpi Duplex, Gray, 200 dpi Fishched Simplex, B&&W, 200 dpi Simplex, Gray, 200 dpi Simplex, Gray, 200 dpi	Rename	Reset

- 2. Choose the profile you want to rename from the dropdown list box and then click the Rename button.
- 3. Enter new name for the profile.

Rename a Profile	X
Please enter the new	v name of the profile:
Original Name:	Betsy
New Name:	
	Save Cancel

4. Choose "Save" to save the new profile or "Cancel" to quit.

Note:

The preset default profiles include Flatbed, Simplex-B&W, 200 dpi, Simplex-Gray, 200 dpi, Simplex-Color, 200 dpi, Duplex-B&W, 200 dpi, Duplex-Gray, 200 dpi, Duplex-Color, 200 dpi. If you have a simplex or a sheetfed scanner, the duplex or the flatbed option will not be available.

The Compression tab allows you to compress your scanned image and choose the level of compression. Bi-tonal images are normally compressed using CCITT standard called Group 4 (G4). Color and grayscale images are often compressed using JPEG technology. Move the **JPEG Quality** slider to the right or left to increase or decrease the level of compression. Note the greater the compression level, the lower image quality. Default is 50%.

Note that the compression depends on your image editing application. If your image editing application does not support the type of compression format, then either a warning message will appear or the image quality of the compressed file will not be acceptable.

JPEG (Joint Photographic Editor Group). This group developed and lent their name to a file compression standard for color and grayscale images that is widely used by scanners, and software applications. On Microsoft Windows-based systems, a file with the extension .jpg has normally been compressed using this standard.

For scanning color or gray images, the following compressions are available:

- None
- JPEG

For scanning B&W images, the following compressions are available:

- None
- G4

Compression:

To complete your scan at a rated speed, the scanned image is compressed by default during transmission. However, if you wish to obtain the highest image quality, you can choose to uncompress the image data before it is outputted.



To Application:

Choose if you wish to compress the image data and transfer it from the TWAIN driver to the application. Note Bi-tonal images are normally compressed using CCITT standard called Group 4 (G4). Color and grayscale images are often compressed using JPEG technology. Move the [Image Quality] slider to the right or left to increase or decrease your image quality. Note the greater the image quality, the lower the compression level. Default is 50%.

Note that the compression depends on your image editing application. If your image editing application does not support the type of compression format, then the image of the compressed file will look abnormal.

From Scanner: (*Note: The availability of this feature varies due to scanner model.*)

Choose if you wish to compress the scanned image and transfer it from the scanner to the TWAIN driver.

Choice: Uncompressed, *Best Image Quality (Low Compression Level), Better Image Quality (Normal Compression Level), Normal Image Quality (High Compression Level). (*: Factory Default)

🍐 Sca	nner Properties	;			×
Image	Compression	Paper Se	tting Information		
	Front Auto Color	Detection	To Application		
	Front Color		Compression:	None 🔻	
	Front Gray Front B&W				
	Rear Auto Color :	Detection			
	Rear Color	Detection			
	Rear Gray				
	Rear B&W				
			From Scanner		
			Compression Mode:	Best Image Quality 👻	
		_			
	Defaults			ОК	Cancel

The Compression tab dialog boxThe Compression tab dialog box

Color Dropout Selection

The [**Color Dropout**] tab allows you to select either green, red, blue, or a color of your choice to remove the details of the selected color from a scanned image. This feature is used to sharpen your text when using OCR (Optical Character Recognition) software. Note this feature applies only to the gray or black and white image.

Choice: None, Auto, Remove Red, Remove Green, Remove Blue, Custom

- None: Does not remove any color.

- **Auto**: Automatically outputs the image with the details of the primary color removed.

- **Remove Red/Remove Green/Remove Blue**: Outputs the image with the details of the specified color removed.

- **Custom**: Specify the color you wish to remove by entering its RGB (Red, Green, and Blue) value respectively.

Advanced Options:

- Quality Mode: Range: 0~20. Default: 10

When [Quality Mode] is selected, you can determine the color to be dropped out using the [Filter Threshold] slider. A lower value will drop more of the selected color out, while a higher value will leave more of the selected color in.

- Normal Mode: Use an optimized setting to determine the color.

AT _30 days after sight (FIRST OF THE SAME TEXOR AND DATE 1 Its inchu Internatio THE SUM OF	AT <u>30 days after</u> (FIRST OF THE SAME TEXOR ADDATE I HSINCHU DEFINITION THE SUM OF
Original	Auto/Remove Green (normal mode)
AT <u>30 days after</u> SIGHT (FIRST OF THE SAME TENOR AND DATE Hsinchu Internatio THE SUM OF	AT 30 days after SIGHT IFIRST OF THE SAME TEACHING AND DATE THE SUM OF
Remove Red (normal mode)	Remove Green (quality mode:
	Threshold: 18)

Preview the color dropout result:

To preview the color dropout result, please follow these steps:

- 1. Click the [Scanner Properties] icon (⁽⁾) on the upper left corner, and choose [**Tab**] to show available tab names.
- 2. Choose [**Preview**] to show the Preview tab.
- 3. Click the [**Preview**] tab to show the Preview page.
- 4. Load your document to the scanner and click the [**Preview**] button to get a preview image.
- 5. On the [Image] tab, click [Gray] or [Black and White] image mode and then choose [Custom] on the [Color Dropout] tab. A [Preview window] button will be displayed.
- 6. Click the [**Preview window**] button to prompt the [**Preview**] window with the previewed image.
- 7. Move your cursor over the preview image. Your mouse cursor now becomes an Eyedropper.
- 8. Click to select a color which you wish to remove.
- 9. Click and hold your mouse button to view the result after removing the specified color. If the result is satisfactory, click [**OK**] to close the Preview window.



The Preview Window



The Color dropout result

mage	Compression	Color Dropout	Paper	Preview Setting	Information	
	Front Auto Color	Detection	Color Dr	opout:	None	-
	Front Color				Advanced Processing	
	Front Gray		Mode:		Normal	Ŧ
	Front B&W		Filter Thr	reshold:	10 *	Þ
			Red:		71	
	Rear Auto Color	Detection	Green:		184	
	Rear Color		Blue:		184	
	Rear Gray]				
	Rear B&W					
	Defaults				OK	Cancel


The Color Dropout dialog box

To select a color on the Color palette,

 Click the Color Dropout tab from the Scanner Properties dialog box.

🤪 Sca	inner Properties		-		
Image	e Compression	Color Dropout	Raper Preview Se	tting Information	
	Front Auto Color	Detection	Color Dropout:	None	•
	Front Color			Advanced Processing	
	Front Gray]	Mode:	Normal	w
V	Front B&W]	Filter Threshold:	10 4	+
			Red:	71 1	
	Rear Auto Color	Detection	Green	184 🔭	
	Rear Color		Blue:	184	
	Rear Gray				
	Rear B&W				
_	Delaults			OK	Cancel

 Choose Gray or B&W from the Image Selection box and click "Custom" from the Color Dropout drop-down menu. The Color palette appears.

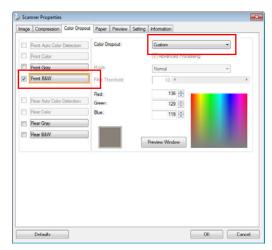

 Move your cursor over the palette. The cursor becomes a cross sign.

mage	Compression	Color Dropout	Paper	Preview	Setting	Information				
	Front Auto Color	Detection	Color Dro	pout		Custom			-	
	Front Color					Advance	d Proces	sing		
	Front Gray		Mode:			Normal			Ψ.	
J	Front B&W		Filter Thre	eshold:		10 4				
			Red:			82	÷			
	Rear Auto Color	Detection	Green:			193	-			
	Rear Color		Blue:			62	-			
	Rear Gray		-	_			-			
	Rear B&W					heview Windo	w			

4. Click to choose a color. The RGB values are changed simultaneously.

age Compression Co			formation	
cropping:	Automatic		-	
	Carrier Sheet M	ode		
Scan Area:	None		×	
	Portrait	C Landscap		(Internet
	X-Offset:	0.00	Width:	8.50
	Y-Offset:	0.00	Length:	14.00
Adjustment:	Left:	0.00 🊔	Top:	0.00
	Right:	0.00	Bottom:	0.00
Background Setting:	White Backgroun	d 🔫		
Jnit:	Inches	-]	
eeding				
Transport Timeout:	•	۲	0 Seconds	

The Paper tab allows you to define values relating to image output (i.e., Auto Crop or not, Scan Area, OverScan, Multi-Feed Detection).

The Paper tab dialog box

Cropping

Cropping allows you to capture a portion of the document being scanned. Choice: Automatic, Automatic (36"), Fixed to Transport, EOP (End of Page) Detection, Automatic Multiple, Relative to Documents.

Options	Description
Automatic	Automatic adjusts the cropping window according to different document sizes and automatically straighten a skewed document. Use this option for batches of mixed-sized documents.
Automatic (36")	Automatically adjusts the cropping window according to different document sizes smaller than 36" and automatically straighten a skewed image. Use this option for batches of mixed-sized document.
	<i>Note: The availability of this feature varies due to the scanner model.</i>

Fixed to Transport	This feature allows you to define the area or zone to be imaged. Use for batches of same-sized documents. If you select this option, you can use the arrow keys to define the x and y offset values, width and length to redefine your scanned area. The Display window will show image placement as you change the values.
EOP (End of Page) Detection	This feature allows you to define the area or zone to be imaged. Use for batches of same-width but different length documents. If you select this option, you can use the arrow keys to define the x and y offset values, width and length to redefine your scanned area. The Display window will show image placement as you change the values.
Automatic Multiple	This option allows you to place various sized documents such as photos, ID Cards, or business cards on the flatbed (if available) and lets you create multiple individually cropped images in one scan. Note: To correctly create multiple images, please make sure there is at least 12mm (0.5") of space between each document.
Relative to Document	This option allows you to crop different areas on your documents and deliver these images in B&W, Gray, or Color separately. For example, there are applications which require you to store the entire document in B&W and a part of the document in color to save storage space. This is useful for documents where a photograph or signature appears in a consistent area on the document such as resumes, and so on.

The following options are only available when **Fixed to Transport** is selected.

- **X-Offset** the distance from the left end of the scanner to the left edge of the scanning area.
- **Y-Offset** the position from the top end of the document to the top end of the scanning area.
- Width the width of the scanning area.
- Length the length of the scanning area.
- **Center:** automatically calculates the x-offset for center-fed feeding based upon document size selected.
- relocate the scan area by click the arrow key on the cross sign while retain the scan size. View the result from the Display window.

The Adjustment option is available when **Automatic** is selected.


 Adjustment —adds a positive/negative margin value Top/Bottom or toward left/right of the image. Adjustment is used when the automatic document feeder is used. Adjustment reduces the possibility of corner clipping on skewed images. To set Adjustment values, use the UP/Down buttons to select where you want to apply Adjustment values: Top/Bottom or Left/Right, and then select the amount of inches/mm/pixels applied. Select a value within the range of 0.00 to 1.00 / -1.00.

Relative to Document: (used for batches of same-sized documents)

This option allows you to crop different areas on your documents and deliver these images in B&W, Gray, or Color separately. For example, there are applications which require you to store the entire document in B&W and a part of the document in color to save storage space. This is useful for documents where a photograph or signature appears in a consistent area on the document such as resumes, and so on.

The following procedure describes how to reproduce the entire document in B&W and a portion of document (picture) in color.


- 1. On the Paper tab, choose "Relative to Document" or "Fixed to Transport" from the Cropping option.
- Choose your scan size from the Scan Area option. The selected scan size will be displayed in a red rectangular box. This is also the scan size of your entire document. (For example, ISO B5. If you have not chosen a scan area and leave the selection as None, then the default area will be the scanner's maximum.)

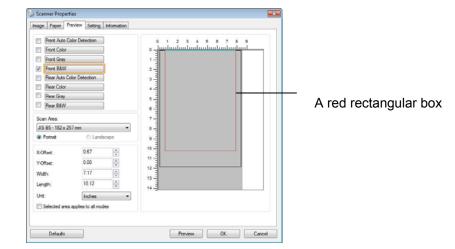


3. Click the Preview tab to display the Preview window. A black rectangular box appears to indicate the max. scan size your have just selected.

	Scanner Prope		t Paper Previe	 Setting Information 		
The Image ⁻ Selection Box	First Addi First Addi First Color First Add First Color First Color	Color Detection				- A black rectangular box
	Defaults			Preview OK.	Cancel	

4. Click the Preview button to view the entire image in low resolution to correctly crop your relative scan area.

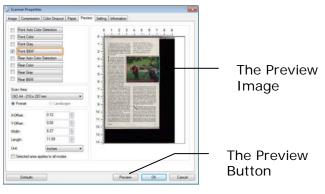

- 5. Select image type from the Image Selection box. The selected image will appear in highlighted color. (For example, Front Color)
- 6. Place your cursor on the Preview window and click your left mouse button. A cross sign will appear as illustrated. Create your relative scan size diagonally by dragging the left mouse button to your preferable size. The selected area will appear in a red box as illustrated.

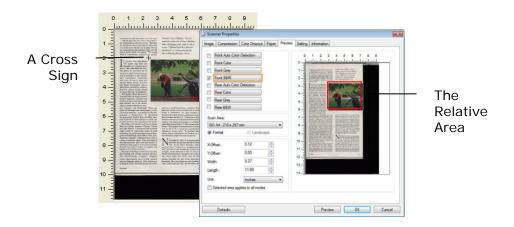

- 7. Check the B&W image from the Image Selection box to scan the entire document.
- 8. Click the Scan button to start scanning the document in two image types and sizes. (See the result in below.)



The entire document in B&W



The relative area in color

Other Paper Selection

Carrier Sheet Mode:

Check this option to automatically crop the scan window according to your document size when scanning non-standard document (fragile, irregular-size document) with a carrier sheet (optional). Note: The availability of this option varies due to scanner model.

Loading Documents Using a Carrier Sheet

A Carrier Sheet is a plastic sheet specifically used for loading non-standard document onto the scanner. It allows you to scan document that can not be scanned in the regular way. Also, documents larger than A4 size, such as A3 and B4, can be scanned by folding in half, inserting into the Carrier Sheet, and scanning in duplex mode. You can also scan documents that can be damaged quite easily such as photographs, or irregular size documents that are difficult to load directly such as clippings.

To scan document using a Carrier Sheet,

For documents larger than A4/Letter size, such as A3

- a. Fold the sheet to be scanned in half.
- b. Fold the sheet tightly and smooth out crease. Otherwise, the sheet may be skewed during scanning.




1. Open the Carrier Sheet and place the document inside.

Align the top of the document to the top of the Carrier Sheet (the printed area).


For documents larger than A4/letter size, such as A3

Align the top of the document to the top of the Carrier Sheet (the printed section) and the folded portion to the right edge of the Carrier Sheet so that the document fits into the Carrier Sheet at the upper corner.



For non-standard document

Center your document in the Carrier Sheet.

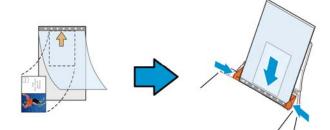

- 2. Load the Carrier Sheet with the gray section (printed section) facing downwards.
- Adjust the paper guides to the width of the Carrier Sheet.
 Adjust the paper guides so that there is no space between the guides and the Carrier sheet. Space between the guides and Carrier Sheet may cause the Carrier Sheet to become unaligned during scanning, and skew the scanned image.
- 4. Start the scan.

Notice:

- [Carrier Sheet] is available for the models that support the Carrier Sheet.
- Some functions are disabled when [Carrier Sheet] is checked.
- This option may not work properly on some applications.

Scan Area

Choose your desired paper size with the drop-down list box. Or you may select a custom paper size by clicking the **Scan Area** box and then click **Add** to include in the choice.

Choices are listed below:



Long Page (<118"):

When you need to scan documents whose length exceeds scanner maximum, please choose **Long Page**. Note if **Long Page** is selected, the **Multi-Feed Detection** will not be available. (Note: This option and the maximum allowable document length vary due to type of scanner.)

When **Long Page (<118")** is selected, be sure to specify your document size in the **Length** and **Width** field.

Notice when scanning long page document:

- 1. Pull out the extension in the ADF Paper Tray.
- 2. Secure enough space around the Output Tray to prevent the ejected paper from falling off the Output Tray.
- 3. To ensure the performance, in color mode, set the resolution to be 300 dpi or lower; in Black and White mode, set the resolution to be 600 dpi or lower.
- 4. Depending on your system environments, application, or your specified paper size, there may be insufficient memory to perform scanning.

OverScan

Overscan allows you to add a specific margin at top and bottom or right and left (Options vary based on the type of scanner) of the edge of the image. This is used to reduce possible corner clipping on the skewed images and often applied to a batch of skewed document to be scanned in the auto document feeder. Select a value between 0 and +5 mm. Note the overscan result will not be shown in the Display window and that the availability of the function varies based on type of scanner.

Pre-Feed

Choice: Enable, Disable. If enable is selected, you can set the amount of time the scanner starts pre-feeding your paper after your documents has been loaded into the feeder. The default is disable. Note: The availability of this option varies due to scanner model.

Transport Timeout

Set the amount of time the scanner will wait and then start auto scan after the first scan job is completed. If you have many separate documents need to be scanned at the same scan settings, this feature is especially useful. The default is 0. The value ranges from 0 to 30 seconds.

Note:

- 1. Within the specified timeout period, if you load your document to the feeder, the scanner starts scanning automatically.
- 2. If your scanner has a flatbed option and you place your paper on the flatbed, after the timeout period, you need to click the Scan button on the TWAIN user interface to start scanning.

Background SettingThis option allows you to set your scan
background. Choice: White Background, Black
Background.

Note: For a sheet-fed scanner with an auto document feeder, this option is currently available only in the "Auto crop" mode. For a scanner with a flatbed platen, this option is available either in the "Auto crop" or the "Fixed to Transport" mode.



White Background



Black Background

Multi-Feed Detection

Multi-Feed Detection allows you to detect overlapped document that go through the auto document feeder. Multi-Feed usually occurs due to stapled documents, adhesives on documents, or electro-statically charged document. Note: The availability of the function varies based on type of scanner.

age Pap	er Multi-Fee	d Detection	Preview	Setting	Information				
	d Detection								
Additio	onal Length De	etection:			None				
Ultrase	onic Detection	I							
	o Scanning aft ne Multi-Feed F			Auto					
Multi-Feed	d Alarm:			C:\Windo	ows\Media\ding.way	/	÷ 🔃	Browse.	
Unit:		Inches			•				

Additional Length Detection

Additional Length Detection allows you to define the length of document being multi-fed. This value indicates the additional length exceeding your scan area. The Display window will show the size of the document as you change the value. A value of 0 indicates no additional length detection. The Additional Length Detection is best used when scanning same-size documents in the auto document feeder.

Ultrasonic Detection

Ultrasonic Detection allows you to set overlapped document by detecting paper thickness between documents. Note : The availability of the function varies based on type of scanner.

There are two options available if Multi-Feed is detected.

• Stop Scanning after Multi-Feed

If this is selected, the scanner will stop the feeder and display the following Warning dialog box if multi-feed is detected.

Action:

- 1. Follow the instruction on the Warning dialog box to remove the rest pages on the feeder.
- 2. Click OK to close the Warning dialog box.
- 3. Scan the rest pages.

Clear the Multi-Fed Paper: Auto

If this is checked, once multi-feed is detected and scanning operation is stopped, the scanner will automatically clear the transport of the multi-fed paper. If this is not checked, once multi-feed is detected and scanning operation is stopped, you need to manually clear the transport of the multi-fed paper. Note: The availability of this option varies based on type of scanner.

• Multi-Feed Alarm

If a wave file is added, the scanner will make a sound alarm if multi-feed is detected yet no Warning dialog box will be displayed.

If "Stop Scanning after Multi-Feed" is selected, the scanner will stop the feeder.

If "Stop Scanning after Multi-Feed" has not been selected, the scanner will continue to scan till the end of your document.

Action:

- 1. If "Stop Scanning after Multi-Feed" is selected, follow the action described in the preceding section "Stop Scanning after Multi-Feed" on the previous page to complete your job.
- 2. If "Stop Scanning after Multi-Feed" has not been selected, rescan the pages where multi-feed is detected.

How to add the sound alarm :


- 1. Click the Browse button on the right side of the speaker icon. The Open dialog box appears.
- 2. Choose your wave file.
- 3. Click the Open button. The wave file is added.

Units

Defines the primary measurement system. **Inches, Millimeters, and Pixels** are available.

The Preview tab allows you to preview (a low-resolution scan) your image before final scan. This preview image lets you allocate your scan area. You can choose your scan area by the "Scan Area" drop down list box or placing your cursor on the Display window and dragging it diagonally on the Display window. Then, a red rectangle box will appear to indicate the selected area.

Note: If you choose "Automatic Cropping" on the "Paper Tab", then to select a scan area on the Preview tab is not allowed.

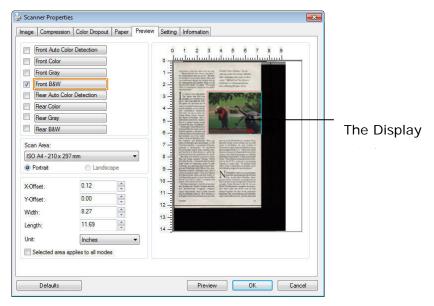


The Preview Tab

The Enhancement tab allows you to set following additional image processing settings.

nage Pa	aper Multi-Feed D	etection Pr	review Enhancemen	nt Setting Information
Punch H	ole Removal			
Punc	ch Hole Removal			
Backgrou	und Setting			
Backgro	ound Processing:	None	*	
Sensitivi	iy:	4	F	0
Fill Color		White		
Despeck	White Black	Edge E	Millimeters	Line Removal
Noise N		0 🍝	Pixels	None
Noise R	adius:	1		100 Millimeters

The Option tab dialog box

PunchYou can remove punch holes from the output scanned image whenHolescanning punched document. Note the availability of this featureRemovalvaries depending on your scanner model.

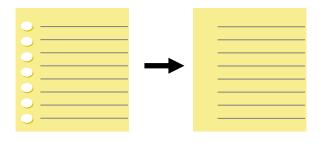


Original Output image **Punch holes can not be removed when:**

- Resolution is set lower than 150dpi
- The hole is near the edge of the document
- The holes are not aligned along the edge of the document
- Punch Hole Removal is available only when "Auto Crop" is enabled. If either "Fixed to Transport", "EOP (End of Page) Detection", "Automatic Multiple", "Relative to Documents" is selected from the Cropping option on the Paper tab, the Punch Hole Removal option will be disabled.

Shadow Removal

When **Flatbed** on the **Scan Source** option is selected on the **Image** tab, the **Shadow Removal** option will be enabled. Click to remove the shadow on the book spine when scanning a book.

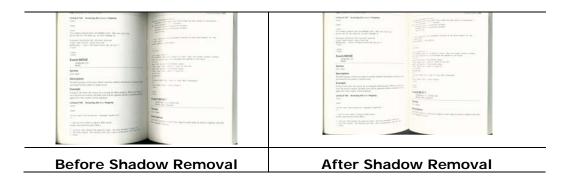

Background Processing: The [Background Processing] option allows you to

smooth background color or remove it to make image clearer. The option is

especially useful for documents with color forms such as invoices.

Choices: None (default), Smooth, Removal

- None no background processing will be performed (default)
- **Smooth -** produces images with a more uniform background color. This option improves image quality.
- Removal identifies the background color and then removes it.

Sensitivity: Choice: 0, 1, 2, 3, 4. Default: 0

- The higher the value, the more background color will be kept.

Mode: Auto, Moiré

If [Smooth] is selected in the [Background Processing] option, then the choices

for the [Mode] option includes Auto, and Moiré.

- Auto uses the factory preprogrammed mode to proceed background smoothing.
- **Moiré** Remove the moiré patterns that appear on the background of the image when scanning printed material.

If [Removal] is selected in the [Background Processing] option, then the [Mode]

option will be replaced with [Fill Color]. Choices: White, Auto.

- White identifies the background color and substitutes it with white.
- Auto identifies the background color and substitutes it with the color of the largest background zone.



Background Processing: None





Background Processing: Smooth

Background Processing: Removal Fill Color: White

Note: Background color in small zone will not be processed or removed.

Edge Fill Check White or Black if you wish to add white or black edge on the border of your scanned image. Enter the value from 0 to 5 mm. Default value is 0.

Janaka.	
N kato (kU) releven viso have the large where of the 2019a, when there had non-howing, assumpting and included as for, Services the right and dat late.	particles.
Cent II was viewy Telgies,	It was still recovering from the surplance of the 1979s, when there had been borroe, Minapping and Meelogical coeffict between the right and the last.
Design in the law are - Flats for the messes, Alexies the second, Lawses for the case.	And it was very Italian
On down go warrant of the city vision is intell stread bioset and californi, north, a transmissi waarweld fault and sequences.	beevere had Jakan sars - Pals for the meson, Alles for the sporty, Lawlas for the risk-
Losing a very of EL	On anning cantaer all the ellip where I lived small shaps acid selents, have, choose and wanders that and regarishme.
Taxants have a strong conce of Budy our Monthly	Losing a way of Ma
and a logs pilds to they dily	Remarks have a strang sense of their own intentity and a large price in their city
III 2010(06, cs. well as bread there were at resp. for shocks of despit, dataset with flaw an INCESC (III) bit is closed as in their ensurements of the state.	
Training that second any part second building the state of the second se	2) Eddnike, et woll as invest there were stronge flat thesis of dough, deeped with four or another line little provide, in Rotani I had sever sees fresh parts.
Angle (pro nor - Appendix to have any district or to do.	Twenty-file years ago, not wany to spraw hand in their and net many people sprite foreign inclusion not appended to have any dealers to to be.
and rank, in the platested whith, same interface for all and interface rank in the platester and be also also also also also also also also	But new, in the probabant world, some middle-class Remark and they all play as
The Station Station of over-of one completents determines species to As Station delibers only as Review	international advants on that story will grow to speeding Degion fluency.
to restaurants the values in a security readient but, it was note juits the Address. the date we	The Elabor failure of even of my designer's classifiers speaks to it a Italian children only in English.
that are using out now two sense for boundary of environme or applicit contractor are very after Annes.	1) restaurants the watters are usually Zaides but, if you lask less the initiates, the provid likel and to may and local fervientes for becable of processing or spaghets advances are unconferent strend.
And the inter of the tites second motive and and vary 25 years ago to staggester rig.	
the becomes that poid for it - that produce, using a that people wanted to it as because	And the May of the Ball services review and endness 25 years egs in disappearing.
t vie more well designed and well prices - an intropping to he lowpete scanes threas well-publicle from Chine.	The bostnesses that gold for is - that provided things that periods wanted to huy because they were well designed and well priced and strategy the surveyous agents charge compatibulit here. On we
Minister desis	Photoson made
The wher and methods, showed have specifies morning showing and making, now go to work now.	The avives and indiffers, also solid New speed the revening sheeping and specing, often po- in work new.
Nonco of the exact front antique back do do him have to be the more than back cased. Accurate as if the how happy tailor framework cases do not be more than the concentration while concording to the main series.	Naily of the skall hard shops they do not here the to while any more have closes. Advects of TV then happy balant further same sweeping the memory bogst in the supervariate and a work of all in the intervaries.
Executions of they was hard, inverse while, I store at a positive batcher wire such another type many a children and opposi-	Densitions on any new leads intro work, I though a pouldw butcher who asits occupent the range choices and eggs.
No legitive unit rise real mant all a strage part access the could all user recent term may other assessments in this charge them I have seen haven your calculat.	It's bracher will the rad meat at a shop just access the raad. I have rever seen any other undersets at the shop when I have been buying much base.
Long polite closing bits , which is also v7.31 in the evening, the size is immicrationly class	using before clearing time, which is alread 7.30 in the recycles, the steps to instruct deally cause




Edge Fill: 5mm (Black)

Despeckle


Occasionally small dots or specks appear in the background of a scanned image. Remove unwanted speckles provides a cleaner image for OCR (Optical Character Recognition) processing, and also helps to reduce compressed file size.

Define the speckles (also known as image noise) you wish to remove by specifying its number (size) and radius (range). The measuring unit is pixel. The higher the number, the more speckles will be removed.

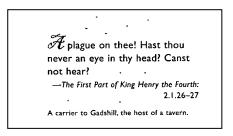

Before Despeckle

(noise number:0, noise radius:1)

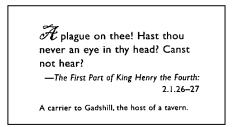

After Despeckle

(noise number: 22, noise radius: 10)

Note:

The function is currently available for Black and White image only.To scan at rated speed, it is recommended to set the noise radius up to 10 pixels.

Line Removal: When Black and White image mode is selected on the [Image] tab, the [Line Removal] option will be enabled. Line Removal erases lines on the image and then reconstructs characters so the OCR (Optical Character Recognition) accuracy can be improved.


Choices: None, Form, Horizontal, Vertical

None – the default mode which does not remove any line.

Form – remove any form in the document.

Horizontal – select [**Horizontal**] and then enter the length of horizontal line to remove only the horizontal line exceeding your specified length.

Vertical – select [**Vertical**] and then enter the length of vertical line to remove only the vertical line exceeding your specified length.

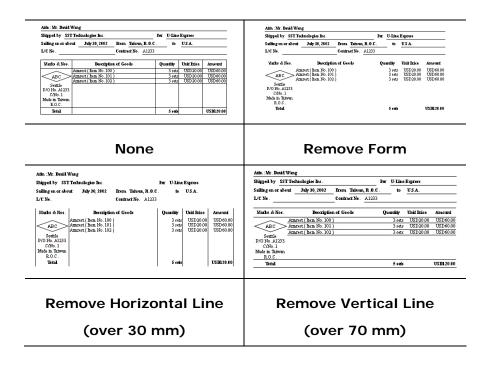


	Paper	Multi-Feed Detection	Preview	Rotation	Enhancement	Settin	g Infor	mation	
Rotat	ion								
Rota	ation Deg	irees :	None			•	Mode:	Quick	×
Image	e Control	Options							
Split	Image:		None			•			
Flip S	ide Rotat	tion							
4				F		Fanfold			
1	1 A	Book			AL O	Fantold			
Image	e Control	Options							
	Mirror								

The Rotation tab allows you to set the following image rotating options:

Rotate Image Choose the rotation angle from the drop down list if you wish to rotate your scanned image.

Choice: None, 90°CW(clockwise), 90°CCW(counter clockwise), 180°, Auto based on contents. Auto rotate every even page.

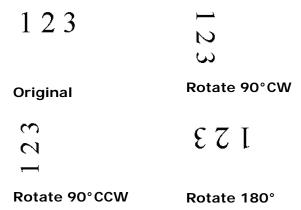

Auto based on contents: Automatically rotate images based on the contents of document. When **Auto based on contents** is selected, its modes

will be enabled to let you select more options.

Mode: Quick, Full Text, Complexity

Quick – the default mode to let you rotate images at the fastest speed.

Full Text – the enhanced mode for documents with mixed text orientation.

Complexity – the enhanced mode yet at the slowest speed for document with complex image or text orientation.

Auto rotate every even page:

Automatically rotate 180° on every even page. This is especially useful when you scan the inside pages from a book. As a result, if you choose "Flatbed (book)" from the "Scan Source" option, "auto rotate every even page" will be selected as default.

Note: This option varies based on type of scanner.



Split Image By splitting an image, two separate images are created horizontally or vertically. This is useful for documents containing two pages per image when you want to save them as two images (one page for one image). Choice: None, Horizontal, Vertical. Default is None.

Horizontal: Divide one image into the upper half and the lower half.

Vertical: Divide one image into the left half and the right half.





Split Horizontally

Split Vertical

Flip SideSelect "fanfold" to rotate the image of the reverseRotationside to 180 degrees.

This is applied to double-sided document which are viewed in portrait are sometime fed into the scanner in landscape or vice versa.

Choice: Book, Fanfold.

If "Book" is selected, the image of the reverse side will not be rotated.

The following illustration shows the documents which should be viewed in portrait are fed into the scanner in landscape



Image ControlCheck the Mirror box if you wish to reverse the rightOptionand left side of your image.



Original



The Mirror Effect

The Separation Tab

The Separation tab allows you to enable the detection engine to detect the blank page, barcode, and patch code and then notify the software application which supports document separation to separate your multi-page documents. Choices: Blank Page Removal, Barcode Detection, Patch Code Detection.

age	Paper	Multi-Fee	d Detection	Preview	Rotation	Separation	Enhancemen	t Setting	Information	
Blank	Page R	emoval								
	Blank Pa	ge Remova	al Threshold:			1 2 2 1		N N N	50 %	
D	ode Dete	all and the								
	Enable	CLIOT		Calaat	Barcode Ty		Zone :	All	Ŧ	
	Inable			Select	Darcode 1	/pe	2016	MI		
Patch	n code D	etection								
	Enable									

Blank Page	Choices: None, Blank Page Removal Threshold,
Removal	Image Size.
	None – Do not remove the blank pages.
	Threshold - Move the slider to the left or right to
	define your threshold for the blank page.
	Image Size – Range: 1~ 10000 KB. Specify your
	desired image size to detect the page as a blank
	page. For example, if 3 KB is selected, any page less
	than 3 KB will be recognized as blank page.
Barcode	Check [Enable] to detect barcode and notify the
Detection	software application for advanced processing. Please
	note the whole document will be checked and no
	specific detection area needs to be designated.

When the bar code has been detected successfully \cdot a file [avbarcode.ini] will be

created and stored in the following path:

Windows XP: C:\Documents and Settings\All Users\Application

Data\%PRODUCTNAME%

Vista, Windows 7, Windows 8, Windows 10: C:\ProgramData\%PRODUCTNAME%

Barcode Types:

The following barcode types can be detected.

Two-dimensional codes

- Aztec
- DataMatrix
- PDF417
- QR Code

One-dimensional barcodes:

- Add-2
- Add-5
- Airline 2 of 5
- Australian Post 4-State Code
- BCD Matrix
- Codabar
- Code 128 (A,B,C)
- Code 2 of 5
- Code 32
- Code 39
- Code 39 Extended
- Code 93
- Code 93 Extended
- DataLogic 2 of 5
- EAN 128 (GS1, UCC)
- EAN-13
- EAN-8
- GS1 DataBar
- Industrial 2 of 5
- Intelligent Mail (One Code)
- Interleaved 2 of 5
- Inverted 2 of 5
- ITF-14 / SCC-14
- Matrix 2 of 5
- Patch Codes
- PostNet
- Royal Mail (RM4SCC)
- UCC 128
- UPC-A
- UPC-E

Barcode Zone:

Specify the barcode zone to be detected.

Select **FAII** to checks the whole document and detects barcodes. Or you may speed up the process by specifying a detection area since only the specified area is checked.

Choice: All, Top, Bottom, Left, Right, Bottom Right, Bottom Left, Top Right, Top Left

Choice for barcode zone on a page:

All	Тор	Bottom	Left	Right
Bottom Right	Bottom Left	Top Right	Top Left	

Note:

- Recommended resolution: 200~600 dpi for regular barcode, 300~600 dpi for QR code
- Skewed barcodes may not be recognized correctly.
- Using the same sheet repeatedly may decrease the recognition accuracy due to accumulated dirt on the sheets. If the sheet is not recognized correctly or gets smudged, replace it with a new sheet.

Patch code Detection:

Check [Enable] to detect patch codes and notify the software application for

advanced processing.

A patch code is a pattern of parallel, alternating black bars and spaces (i.e. a barcode) that is printed on a document. Patch code sheet is most commonly used as a document separator in a stack of document.

You can find various sizes of patch codes (PDF) by choosing [Start] menu>[All Programs]>[Avision Scanner Series]>[Patch code] in succession.

Simply print the PDF file to produce the patch code sheet. Insert the patch code sheets to wherever you want the file to separate.




Patch code sheet

Notes to print the patch codes:

- Use blank white paper.
- Set the scaling to 100%. The sheet is not recognized correctly when printed in a size smaller than the original.
- Do not use toner saving mode. The sheet is not recognized correctly when the print is too light.
- Do not use thin paper in order to avoid bleed-through from the back.
- When you copy a patch code sheet that you printed out, make sure to copy by the same size and brightness as the original copy.
- Use the same sheet repeatedly may decrease the recognition accuracy due to accumulated dirt on the sheets. If the sheet is not recognized correctly or gets smudged, replace it with a new sheet.

The Setting Tab

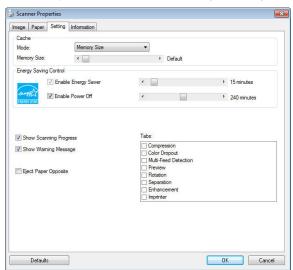

The Setting tab allows you to set the following settings:

The Setting tab dialog box

Energy Saving Control	Check the Enable Energy Saver box and move the slider to set the amount of time to start the energy saver after your last action. The range is from 1 to 60 minutes.
Enable Power	Check the Enable Power Off box and move the slider to set
Off	the amount of time to automatically turn off the scanner after
	your last action. The range is from 1 to 480 minutes. The
	default is 240 minutes (4 hours). Note the value of "Power
	Off" has to be greater than or equal to the value of "Energy
	Saving".

Cache	 Mode: None, Page Number, Memory Size. This option allows you to assign a specified memory size from the available RAM to process the image data. By specifying a smaller memory size, you can free more memory for other applications you are running. By specifying a larger memory size, you can have more memory to process the image data especially when you have a large amount of documents needed to be scanned. You can also specify your memory size by the page number. For your information, an A4 color document scanning at 300 dpi consumes approximates 24MB.
	Image Count When the selected cache mode is "none", the image count option allows you to assign number of pages you need to scan. For example, if you wish to scan the first two pages, simply move the page slider to 2, and the scan action will be stopped when the scanning of the first two pages have been completed.
Show Scanning Progress	Check and the scanning progress bar will be shown during scanning.
Show Warning Message	Check to show the warning messages such as "ADF pad count exceeds 50,000 scans (the number varies based on type of scanner). Please replace the ADF pad and reset the pad count."
Save Settings after Closing	Check to save your scanner properties settings after leaving the dialog box. Next time when you open the Scanner Properties dialog box, the previously saved settings will be shown.

The Imprinter Tab

The Imprinter tab allows you to print alphanumeric characters, date, time, document count and custom message on your scanned image if digital imprinter is selected or at the back of your document if external imprinter is selected.

Digital Imprinter					
Print All					
Custom:					
Counter:	0001	Date/Time	e: None	*	
Custom Font	Normal	*			
Advanced			Print Position		
Advanced Font Attributes:	Normal		Position:	Middle	
String Orientation:	Contraction of the		X Offset:		
sung onentation.	Normal	· ·			000
			Y Offset	0	nm
Sample					
0001					
				More	

Choice: External Imprinter, Digital Imprinter. If you have installed an external imprinter, choose external imprinter. If you do not have an imprinter, choose digital imprinter. Note External Imprinter provides a vertical and rear-side print capability while digital printer provides a horizontal and front-side print capability.

Contents

Print All	Check Print All to automatically print the text at all	
	pages of your documents.	
	Uncheck Print All to print the text for the first page of	
	your documents only.	
Custom	Enter your custom text to be included in your print	
	string.	
Counter	Show the document count for the scan session. This	
	value is increased sequentially by the scanner.	
Date/Time	Choose if you wish to include the date and time in	
	your print string.	
	Format: YYYYMMDDHHSS For example,	
	20090402170645-check0001 indicates year, month,	
	date, hour, seconds, your custom text and the	
	counter.	
Custom Font	Choose your desired font.	
	Choice: Normal, Fixed Width	
	Fixed Width (Mono spaced) fonts have a fixed	
	character spacing. So each character occupies the	
	same width.	

Advanced

Font Attributes	Choose your font attributes. Choice: Normal,		
	Underline, Double, and Bold.		
String	Choose your string orientation.		
Orientation	Choice: Normal, Rotated, Vertical, Vertical		cal
	Inversion, 90 degrees CW, 90 degrees CCW		cw
	2010abc	2010abc	
	Normal	Rotated	
	2 0 1 0 a b c	с 7 0 7 0 7 0	
	Vertical	Vertical Inversion	
	2010abc	2010abc	
	90 degrees CW 90 degrees CCW		
	If you check the digital imprinter to stamp text on your scanned image, the illustration of normal and rotated string is shown below:		
	2010abc oqe010Z		
	Normal Rotated		

Print Position	Choose the position you wish to print your string.		
	Move the slider to the right to increase the value or to		
	the left to decrease the value. Range: 0~355mm,		
	default:0 mm		
	The value indicates the height from the bottom of your		
	paper to the last letter of your string. This option is		
	available only if an external imprinter is installed.		
	The value of Print Position		

Print Position (for digital imprinter)

Choose the position of your printed string. **Choice: Top, Middle, Bottom, Custom.** If Custom is selected, enter the X and Y offset value to specify the position.

mage Paper Setting Imprinte	r Information	
Info	*	
CPU:	Intel(R) Core(TM) i3-2120 CPU @ 3.30GHz	×
RAM:	1023 MB	
OS:	Microsoft Windows 7 Enterprise Service Pack 1 (Buil	d 7601)
OS Language:	English (United States)	
Disk Drive:	Fixed drive C:\Total:30717MBFree:10439MB	
	Fixed drive Y:\Total:102398MBFree:10541MB	=
	Fixed drive Z:\Total:102398MBFree:23311MB	
Free Disk Space:	10439 MB	
Application Name:	Avision Capture Tool 1.6 (1.9)	
TWAIN Driver Version:	6.11.0329'16	
I/O Driver Version:	0, 9, 2016, 324	
Port Type:	USB	
ID / Address:	USB	
Optical Resolution:	600 dpi	
Scanner Model:	AD215	
Serial Number:	NO25	*
Report		

The Information tab displays the following system and scanner information.

The Information tab dialog box

The "Report" button :

If you encounter any error message while using the scanner, click the Report button. A report.txt file [Windows XP: C:\Documents and Settings\All Users\Application Data\%PRODUCTNAME%; Vista, Windows 7, Windows 8, Windows 10: C:\ProgramData\%PRODUCTNAME% (C: system drive)] will be generated. Please send this file to the nearest service center for trouble shooting.

The "Reset Roller Count" button :

After scanning over a recommended number of pages (refer to subsequent section 7.4 Replacing the ADF Roller) through the ADF, the ADF roller may be worn out and you may experience problems with document feeding. In this case, it is highly recommended to replace the ADF roller with a new one. (Note the replacement of the ADF roller has to be performed only by authorized service center. Therefore, please return your scanner for roller replacement.) After replacing the ADF roller, click the "**Reset Roller Count**" button to reset the roller count.


Note :

The lifetime and the replacing procedure vary based on type of scanner.

9 Scanning and Sending the Scanned Images to Your Computer (BM2 Air)

Before You Begin:

Before you begin using the function of [**BM2 Air**], please make sure you have already installed the scanner driver, Button Manager V2, and connecting to the scanner to your computer via a USB cable as described in the preceding section, chapter 7 Using the Product as a Regular Scanner.

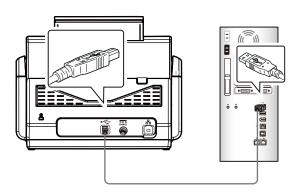

Installing Button Manager V2


Button Manager V2 provides you an easy way to scan your document and then link the scanned image to your designated software application. All this can be done by a simple touch of the button on the scanner. Yet, before you scan, it is recommended to check the button configurations first to ensure a proper file format and a destination application.

Checking the Button Configurations before Scanning

1. Button Manager V2 runs from the system tray. After Button Manager V2 and the scanner driver are properly installed, Button Manager V2 is started and the Button icon will be displayed on the system tray at the bottom right corner of your computer screen.



2. Left-click the Button Manager V2 icon to prompt the following Button Panel.

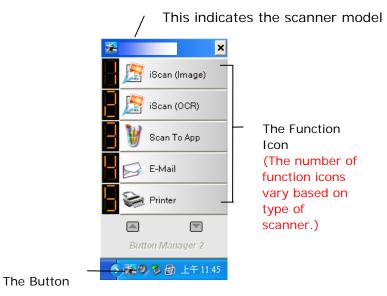

The Button Panel

3. The Button Panel shows the first five scanning buttons. Right-click the button (function) you wish to check. The Button Properties window appears.

	\int	Name of the Selected Button	
	Button Properties - is	Scan (OCR)	
Button Name	Basic Image Adjus	tment Color Dropout Image Processing More Settings	
	iScan (O	CR) Resolution(dpi): 300	
Image Mode Selection	- In O Auto	Paper Size: Auto Crop & Deskew 💌	
Box		Duplex	Basic Scan
DOX	D ⊙ Gray D ⊙ Black and	d White Advanced Settings: Use TWAIN Setup	Parameters
Folder and file name for	File Location	C.Documents and SettingsWoid\My Documents\My Pictures Browse	
the scanned	File Name:	Image_#####	
image	File Format:	OCR(For iScan Only)	
Scan To destination and settings	Destination: Description:	Setup Open your application, scan and insert the scanned image or editable text (after OCR) directly to your application.	
OCR	OCR Language: OCR Zone:	Chinese Traditional Scan Count: 0	
settings		I Characters After Keyword: 5	
		OK Cancel	

If you wish to change the setting, use this window to reset the setting for the file format, destination application, or other scan settings.

4. Click the OK button to leave the window.

Scanning From One Touch of the Buttons

- 1. Adjust the paper guide for the width of paper and load the document with their tops into the automatic document feeder.
- 2. Use ▼ to scroll down to [BM2 Air] on the LCD display.
- 3. Check the button (function) number on the LCD screen to ensure if you are selecting the proper scan settings and destination application. (For example, if you wish to scan with button (function) 3, "Scan to App", which opens Microsoft Paint and displays the scanned image in the window of Microsoft Paint, the LCD screen should show "Function 3").
- 4. Press the **Scan** button on the scanner.
- 5. After the scanning is finished, the Microsoft Paint software will be launched and the scanned image appears in the main window of Microsoft Paint as below.

General	Document feeding mode	Flatber
Specification	s: Technology	
	Optical resolution	
	Scanning speed	
	RAM	
	ADF min. paper size	4.5 incl
	ADF max. paper size	8.5 inc
	Flatbed max. paper size	8.5 inch
	ADF capacity	
	Operation environment	10
	Storage environment	-2
	Noise	
	Dimensions(H x W x D)	
	Weight	
Copy	First copy out	Color mod
Specifications:	s: Color copy speed	
	B/W copy speed	
	Copy resolution	
	Copy scaling	
	Multiple copies	

Note:

1. For details information on how to use the Button Manager V2, please refer to the user's manual in the supplied CD.


2. You may also use Button Manager V2 on your desktop by starting Button Manager V2 from All Programs or double clicking the Avision Scanner Utility from the Control Panel.

10 Troubleshooting

Clearing Paper Jams

In the event of a paper jam, follow the procedures below to remove the paper:

- 1. Press the ADF Release Button on the right side. Gently open the Scanner Front Door to the left.
- 2. Carefully pull the paper out of the ADF unit.

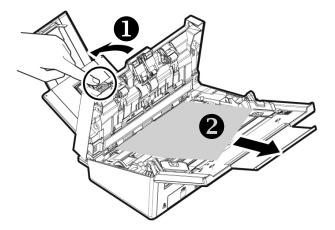

3. Close the scanner front door. Your Scanner is now ready to use.

Questions and Answers

Question:	Paper becomes jammed during scanning.	
Answer:	 Open the front door. Pull out the jammed paper carefully. Close the front door. 	

Question:	More than one sheet of paper are fed into the scanner.	
Answer:	1. Open the scanner front door.	
	 Remove the multi-fed sheets. Close the front door. Flatten the corners and edges. Loosen the paper before putting it into the paper guide again. Check the feeding roller condition. If necessary, follow the cleaning directions and perform the cleaning. 	

Question:	Paper becomes skewed in the scanner.	
Answer:	 Use the slide guide to keep the paper path straight. Check the condition of the feeding roller. If necessary, follow the cleaning directions and perform the cleaning. 	

Question:	Why does my scanned image always come out too dark?	
Answer:	 Please adjust the screen settings to SRGB. Please adjust the brightness settings on the screen from application software. 	

Error Code and Error Messages

Error Code	Message	Solution
59000 59030 59040 59060 59100	Device internal failure	Reboot the machine, and try again. If the error persists, contact service personnel.
592301	Mail server is NULL	 Check "Mail server" setting. Contact your network administrator for further help
530001	Device internal failure	Reboot the machine, and try again. If the error persists, contact service personnel.
530002	Fail to connect Mail server	Contact your network administrator for further help.
531001	SMTP login name error or SMTP login password error	Check if the login name and password are correct.
530421 531421 532421 533421 534421 536421	SMTP [421] Service not available, closing transmission channel. The Server is going to shut down.	Contact your network administrator for further help.
530440	SMTP[440] mail from account doesn't conform with authentication	The account of from and login must be same
532450 533450	SMTP [450]Requested mail action not taken: mailbox unavailable	Contact your network administrator for further help.

532451 533451 534451 535451 537451	SMTP [451]Requested action aborted: local error in processing	Contact your network administrator for further help.
533452 535452 537452	SMTP [452]Requested action not taken: insufficient system storage	Contact your network administrator for further help.
531501 532501 533501 534501	SMTP [501]Syntax error in parameters or arguments	 Check "From" address. Check "To" address. Contact your network administrator for further help.
531504	SMTP [504]Command parameters not implemented	 Check "From" address. Check "To" address. Contact your network administrator for further help.
533550	SMTP [550]Requested action not taken: mailbox unavailable[E.g., mailbox not found, no access]	Check "To" address.
533551	SMTP [551] User not local: please try again.	1.Check "To" address. 2. "From" address and "To" addresses must be different.
533552 535552 537552	SMTP [552]Requested mail action aborted: exceeded storage allocation	 Check "To" address. Check mailbox storage allocation. Contact your network administrator for further help.
533553	SMTP [553]Requested action not taken: mailbox name not allowed	Check "To" address.
534554 535554 537554	SMTP [554]Transaction failed	Contact your Network administrator for further help.

538001	Connection broken during data transmission.	 Check network environment. Check if the disk space of your email attachment is larger than the mailbox quota.
540001 540009 540010 540011 540012 540013 540014 543501 545501 545504	Device internal failure	Reboot the machine, and try later. If the error persists, contact service personnel.
540002 540003	Fail to connect FTP server.	Make sure the FTP server has not been shut down and the port number is correct. If the error persists, contact your network administrator.
540004	FTP login name error	Check your login name and try again.
540005	FTP password incorrect	Check your password and try again.
540006	retry 3 times for path	The FTP's path has some problems. Contact your network administrator for further help.
540007	timeout or Job name is NULL	Input file name within limited duration.
540008	can't get data socket	Check network environment.
540015	Connection broken during data transmission.	Check network environment.
540016	file exist, rename fail	Re-input new file name.

541001		
542001		
543001		
544001	command exceeds	Reboot the machine, and try later.
545001	maximum size of 256	If the error persists, contact service
546001		personnel.
547001		
548001		
541002		
542002		
543002		
544002	The command transfer	
545002	fails	Check network environment.
546002		
547002		
548002		
541003		
542003		
543003		
544003	The command reply	
545003	read fails.	Check network environment.
546003		
547003		
548003		
541004		
548004		
542004		
543004	The FTP server doesn't	Contact your network
544004	reply message.	administrator.
545004		
546004		
547004		
546005	file transfer fails	Check network environment.

541421 542421 543421 544421 545421 546421 548421	[421] Service not available, closing control connection.	Too many connections from this IP, contact your network administrator.
544450 546450 548450	Requested file action not taken.	The file already exists and is locked by Windows.
546452 548452	Requested action not taken. Insufficient storage space in system.	Ask FTP administrator to increase allotted storage space, or delete unnecessary files.
541500 542500 543500 544500 545500 546500 547500	[500]Codes The command was not accepted and the requested action did not take place.	Contact your network administrator.
541501 542501 544501 546501	[501]Syntax error in parameters or arguments.	Check your input parameters; e.g., make sure there is no wrong characters, spaces, etc.
541502 542502 544502	[502]Command not implemented.	The server does not support this command. Contact your network administrator.
541550 542550 546550	[550]Requested action not taken. File unavailable (e.g., file not found, no access).	Verify that you are attempting to connect to the correct server/location. The administrator of the remote server must provide you with permission to connect via FTP.
546553 48553	Requested action not taken. File name not allowed.	Change the file name or delete spaces/special characters in the file name.

561032	Error share folder name	Please check if the shared folder name is correct.
561003	Error share path	Please check if URL or IP address is correct.
561012	Error account name or password or the date of machine is incorrect.	 Check if account name or password is correct. Check if current local time on the machine is correct.
561019	No authority to create directory	Check account authority on the shared folder.
564019	No authority to write file	Please check account authority on share folder.
561183	Duplicate directory name	Rename a new directory name.
564183	Duplicate file name	Rename a new file name.
561034	File in use	Please close the file in use.
563021	SMB service is not ready	 Please wait SMB service initialization, and try scan-to SMB again later. Please check the same host name on different machine.
563039	Disk is full	Please clean up disk space.
562088	Time out	Server busy. Try scan-to SMB again later.
002013/003205 003206/003207	Paper jam.	Open the front door to remove the jammed paper.
003101	Multiple feed.	Remove paper. Fan your paper and try again.
002014	ADF cover opens.	Close ADF cover.
003005	ADF Bottom Head Light check error.	Restart the device. If the error persists, call service to replace the lamp.
003006	ADF top head light check error.	Restart the device. If the error persists, call service to replace the lamp.

003003	DRAM read and write test error.	Restart the device. If the error persists, call service to replace the main board.
003004	ADF DRAM read and write test error.	Restart the device. If the error persists, call service to replace the main board.
002024	NVRAM read and write test error.	Restart the device. If the error persists, call service to replace the main board.
002037	ADF Bottom head AFE test error.	Restart the device. If the error persists, call service to replace the main board.
000016	UART read and write test error	Restart the device. If the error persists, call service to replace the main board.
000017	Motor Stall	Restart the device. If the error persists, call service to replace the motor.
000020	Download firmware error	Check firmware file and try again.
000022	Lamp off error.	Restart the device. If the error persists, call service to replace the lamp.
000023	Flashrom read and write test error.	Restart the device. If the error persists, call service to replace the main board.
000024	ADF bottom head AFE LVDS test error.	Restart the device. If the error persists, call service to replace the main board.
000025	ADF top head AFE LVDS test error.	Restart the device. If the error persists, call service to replace the main board.
002033	Page skew.	Remove paper. Fan your paper and try again.
000029	ADF AFE read and write test error.	Restart the device. If the error persists, call service to replace the main board.
003211	Page miss-feed.	Make sure the edge of your document slightly touch the paper guides and try again.
002015	ADF no paper.	Load paper into the auto document feeder.

Technical Support

If your problem still exists after trying the above solution, please contact our technical support.

Headquarter

Avision Inc.

No. 20, Creation Road I, Science-Based Industrial Park, Hsinchu 300, Taiwan, ROC TEL: +886 (3) 578-2388 FAX: +886 (3) 577-7017 E-MAIL: service@avision.com.tw Web Site: http://www.avision.com.tw

US and Canada Area

Avision Labs, Inc.

6815 Mowry Ave., Newark CA 94560, USA TEL: +1 (510) 739-2369 FAX: +1 (510) 739-6060 E-MAIL: support@avision-labs.com Web Site: http://www.avision.com

China Area

Technical Support Center in Shanghai 7A, No.1010, Kaixuan Road, Shanghai 200052 P.R.C. TEL :+86-21-62816680 FAX :+86-21-62818856 E-MAIL: sales@avision.net.cn Web Site: http://www.avision.com.cn

Europe Area

Avision Europe GmbH

Bischofstr. 101 D-47809 Krefeld Germany TEL: +49-2151-56981-40 FAX: +49-2151-56981-42 E-MAIL: info@avision-europe.com Web Site: http://www.avision.de

South American


Avision Brasil Ltda.

Rua Bamboré 41, Vila Monumento, Ipiranga. CEP: 04278-060, São Paulo, Brasil TEL: +55-11-2737-2005 E-MAIL: suporte@avisionbrasil.com.br Web Site: http://www.avisionbrasil.com.br/

11 Maintenance

Cleaning the Touch Screen

Wipe the Touch screen Monitor with a wet cloth first then wipe it with a dry cloth.

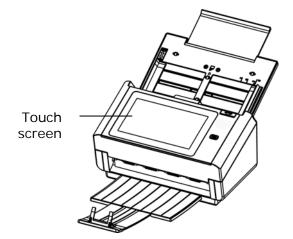

Warning:

Do not use liquids, household cleaners, or neutral detergents, as they may damage the touch screen.


Cleaning the ADF

After using the scanner for a long period of time, the rollers and glass inside the scanner may become contaminated with ink, toner particles or paper dust. It is necessary to perform routine cleaning to ensure the optimum image quality and performance. As a guideline, please clean the rollers and glass after first 4,000 to 5,000 scans and then perform the cleaning on a weekly basis. Note that the guideline varies according to the type of documents you are scanning.


Tip! If documents do not feed easily, if several documents feed at the same time or if streaks appear on the scanned images, it is time to clean your scanner.

The Cleaning Procedures

- 1. Soak a clean cloth with some isopropyl alcohol (95%).
- 2. Press the ADF Release button to open the front door to the left. Wipe and rotate the ADF Roller until the surface is completely removed from dust.

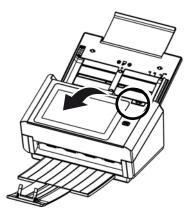


- 3. Wipe the rubber part of the ADF pad. Be careful not to damage the pick springs.
- 4. Close the scanner front cover. Your scanner is now ready for use.

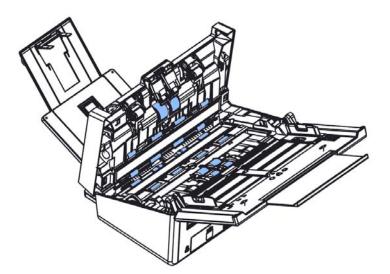

Cleaning the Glass

- **1.** Press the ADF Release button. Open the front door to the left.
- 2. Wet a clean cloth with some isopropyl alcohol. (95%)
- 3. Wipe the glass and the white area as illustrated below to rid the dust or dirt.

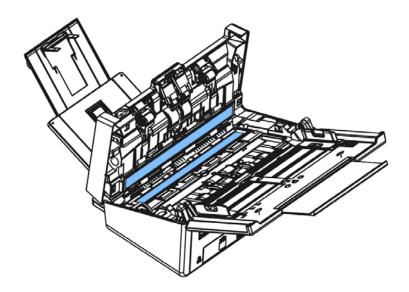



Replacing the ADF Reverse Roller

After scanning approximately 100,000 pages through the ADF, the ADF Reverse Roller may be worn out and you may experience problems with document feeding. In this case, you may need to replace a new ADF reverse roller. For ordering the ADF roller, please consult your nearest dealer and follow the procedure below to replace it.


Disassembling Procedure

- 1. Press the ADF Release button.
- 2. Gently open the ADF Front Door to the left.
- 3. Hold the Reverse Roller Cover with your fingers as shown and place it down.

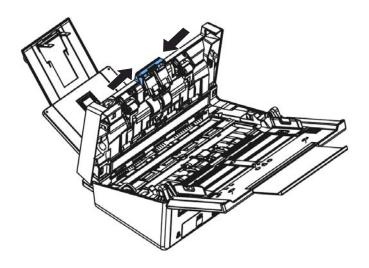

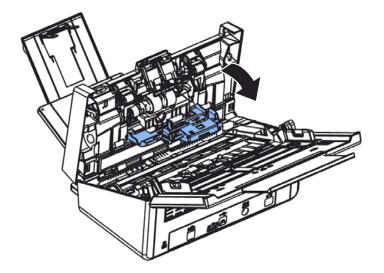


4. Press the right end of the Friction Roller externally to detach it from the slot and then detach the left end from its hole.

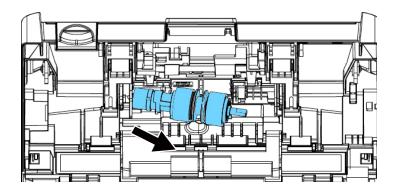


Reassembling Procedure

- 1. Insert the left end of the Reverse Roller to the hole of its original place.
- 2. Insert the right end of the Reverse Roller to its slot.

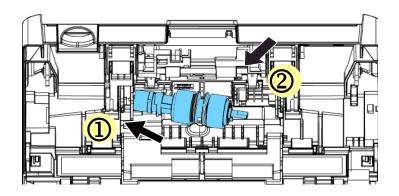

3. Close the Reverse Roller Cover.

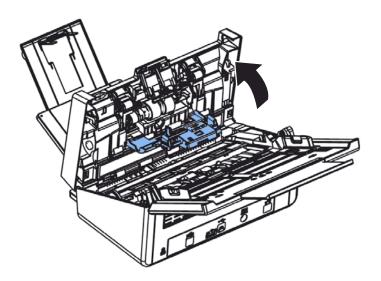


4. Close the ADF Front Cover.


After scanning approximately 200,000 pages through the ADF, the ADF rollers may be worn out and you may experience problems with document feeding. In this case, you may need to replace a new ADF roller. For ordering the ADF roller, please consult your nearest dealer and follow the procedure below to replace it.

Disassembling Procedure


- 1. Press the ADF Release button to open the ADF front door.
- 2. Pull the center of the ADF Roller Cover to open it.

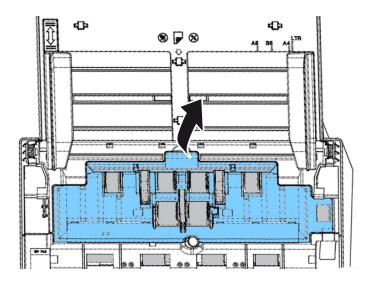

3. Move the tab of the ADF Roller **DOWN** as indicated.

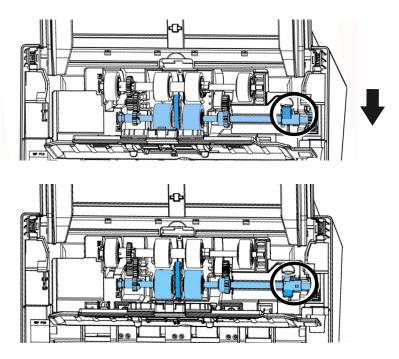


4. Detach the right end of the ADF roller from the scanner and remove the ADF roller.

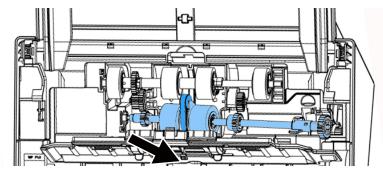


Reassembling Procedure

1. Insert the left end of the ADF roller first to its slot and place the ADF roller to its proper position.

Make sure the belt in the center of the lower ADF roller is installed horizontally with the other rollers as indicated.

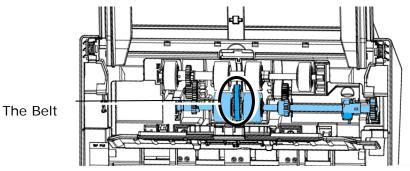

2. Move the tab of the ADF roller UP.

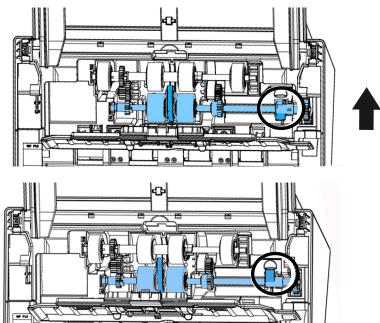

3. Close the ADF roller cover. A snap-in sound could be heard if correctly installed.

All specifications are subject to change without notice. For more detailed information, please refer to our web site at www.avision.com

Items	Specifications
Model Number : FL-1801	н
General Specifications	
System Description	Network Scanner
Image Sensor	Contact Image Sensor (CIS)
Light Source	LED Light Bar
Optical Resolution	600 x 600 dpi
Output Quality	Input: 48 bits color
	Output: 24 bits Color
	8 bits Gray
	1 bit Monochrome
LCD Size	8 inches
External Connections	1. RJ-45 (for Network connection)
	2. USB 3.1 Gen 1
Network Connection	RJ-45 Ethernet 10/100/1000 Mb, Wi-Fi
Output Format	JPEG, TIFF (One-Page TIFF), M-TIFF
	(Multi-Page TIFF), PDF (One-Page PDF),
	*M-PDF (Multi-Page PDF), Searchable PDF,
	PDF/A(M-PDF), PNG
Dimension (WxDxH)	
Min.	316 x 207 x 178 mm (12.44 x 8.15 x 7.01 in.)
Max.	316 x 675 x 254 mm (12.44 x 26.57 x 10 in.)
Weight	4.2 Kg (9.26 lb)
Power Requirement	100~240Vac, 50/60Hz
Power Source	24Vdc, 2.0A
Operating Temperature	10°C~35°C
Environment Humidity	10%~85% RH
Scan Size	
ADF Paper Capacity	100 sheets (70 g/m+ ² or 20 lb. Paper)
ADF Paper Size	50 x 50 mm (2 x 2 in.) ~ 216 x 356 mm (8.5 x 14 in.)
Paper Thickness	27 ~ 413 g/m ² (7~110 lbs)

Network Specificat	tion	
Connectivity	RJ-45 Ethernet 10/100/1000 Mb, Wi-Fi	
Communication Protocol	TCP/IP, SMTP, FTP, FTPS, SMB, DHCP, DNS	
Configuration	1. IP address	
Requirement	2. Subnet mask	
	3. Gateway	
	4. SMTP server	
	5. FTP server	
E-mail Specificatio	n	
Communication	SMTP	
Protocol		
File Formats		
B&W	PDF, TIFF, MTIFF	
Gray/Color	PDF, TIFF, MTIFF, JPEG	
Default File Format	PDF	
Separation Limit	1MB, 3MB, 5MB, 10MB, 30MB, Unlimited	
Resolution	100 dpi, 150 dpi, *200 dpi, 300 dpi, 400 dpi, 600	
	dpi	
Default Resolution	200 dpi	
Supported Mail	Lotus Mail Server 5.0	
Server Application	MS Exchange Server 2000	
	RedHat 7.0 SendMail	
	MAC Mail Server in OS 9.04	
Filing Specification		
Communication Protocol	FTP, FTPS, SMB	
File Formats	JPEG, TIFF (One-Page TIFF), M-TIFF (Multi-Page	
	TIFF), PDF (One-Page PDF), *M-PDF (Multi-Page	
	PDF), Searchable PDF, PDF/A(M-PDF), PNG	
Resolution	100 dpi, 150 dpi, *200 dpi, 300 dpi, 400 dpi, 600	
	dpi	
Max. Number of	50	
Filing Profiles		

Wi-Fi Specifications:

Standard	IEEE 802.11 b/g/n standards compliant	
Wireless LAN	1T1R Mode	
Frequency Range	2.412 ~ 2.484GHz (subject to local regulations)	
Modulation Typo	CCK, DQPSK, DBPSK for DSSS	
Modulation Type	64QAM, 16QAM, QPSK, BPSK for OFDM	
Modulation Technology	DSSS, OFDM	
	802.11b: up to 11Mbps	
Transfer Rate	802.11g: up to 54Mbps	
	802.11n: up to 72.2Mbps	
	802.11b: 149.279mW	
Output Power	802.11g: 360.579mW	
	802.11n (HT20): 345.939mW	
Antenna	PCB antenna	
Consult.	WEP 64/128, TKIP, WPA, WPA2 mixed, 802.1x	
Security	and 802.11i	